

MOOMBA 



2024

Owner's Manual



CONGRATULATIONS

INTRODUCTION

Moomba® inboard watersports boats are manufactured by Skier's Choice, Inc. in Maryville, Tennessee and distributed throughout the United States and the world.

This manual provides an overview for operating your Moomba boat. It should be considered a permanent part of your Moomba boat, and contains important information on Safety, Boating Rules, Proper Operation and Maintenance of your boat. Should the boat be sold, this manual will provide the same important information to the next owner.

Be sure to read and understand all aspects of Boating Safety and Operation before using your boat. If you have any questions, your dealer can provide the information you need to have a safe and pleasurable boating experience.

All information, illustrations and specifications in this manual are based on the latest product information available at the time of printing. Moomba may discontinue models and equipment or change specifications and designs without any notice and without incurring obligation.

This manual contains information about several Moomba models. Some information may not apply to your boat since standard and optional equipment may vary from model to model.

PIONEERS FROM THE BEGINNING

For over 30 years, we've been battle-testing our boats in some of the most punishing environments and brutal proving grounds on Earth. They're built to take it and take you there with more confidence, more capability and more thrills than ever.

MY MOOMBA

HULL IDENTIFICATION NUMBER: _____

DATE OF PURCHASE: _____

DEALERSHIP: _____

DEALER'S PHONE NUMBER: _____

ENGINE SERIAL NUMBER: _____

TRAILER SERIAL NUMBER: _____



SKIER'S CHOICE, INC.

1717 HENRY G. LANE STREET
MARYVILLE, TENNESSEE
37801

TRADEMARKS & PATENTS

Moomba® is a U.S. and Canadian registered trademark owned by Skier's Choice, Inc. and AutoWake® is a U.S. registered trademark owned by Skier's Choice, Inc. Skier's Choice™, the Skier's Choice logo, the Moomba logo, Tykon™, Mondo™, Mojo™, Craz™, Makai™, Kaiyen™ and SmartPlate™ are trademarks owned by Skier's Choice, Inc. All other trademarks are the property of their respective owners.

AutoWake®: U.S. Patent Nos. 8,798,825; 9,499,242; 9,689,395; 9,828,075; 9,873,491; 10,093,398; 10,414,470; 10,640,182; 10,676,166; 10,717,502; 10,759,507; 10,858,080; 10,926,848; 11,130,551; 11,358,680; 11,438,751; 11,535,347; 11,649,010; 11,679,847; 11,772,756 and other patent(s) pending.

Flow 3.0: U.S. Patent Nos. 10,040,522; 10,112,688; 10,202,177; 10,239,591; 10,370,071; 10,479,461 and other patent(s) pending.

Amplitude Display: U.S. Patent Nos. 9,950,771; 10,577,054; 11,753,116 and other patent(s) pending.

Thruster Control Knob: U.S. Patent No. 11,014,638 and other patent(s) pending.

See www.skierschoice.com/patents-trademarks/ for virtual patent marking.

Skier's Choice, Inc. reserves the right to change product specifications at any time without incurring obligation.

© 2023 Skier's Choice, Inc. All rights reserved.



TABLE OF CONTENTS

CONGRATULATIONS	2
PIONEERS FROM THE BEGINNING.....	4
BOATING SAFETY	8
SAFETY KNOWLEDGE	9
WATER SPORTS SAFETY	20
CARBON MONOXIDE (CO)	22
CAPACITY & WEIGHTING YOUR MOOMBA	24
EMERGENCY PROCEDURES	33
EMERGENCY.....	34
BOATING RULES.....	46
BASIC BOATING RULES	47
LEARNING YOUR MOOMBA BOAT SPECIFICATIONS	53
BREAK-IN PERIOD AND FUEL INFORMATION	61
ENGINE BREAK-IN PERIOD	62
INSTRUMENTS AND CONTROLS	69
STARTING AND OPERATION	76
DRIVER SEAT OPERATION & ADJUSTMENTS	87
BALLAST SYSTEM.....	90
EQUIPMENT AND OPTIONS	94
MOOMBA TOWER	95
AUDIO	101
VERSATILE SEATING	104
TRANSOM	107
DUAL STERN THRUSTERS	114
OTHER OPTIONS	116
MOOMBA COVER	118
SERVICE & MAINTENANCE	120
MAINTENANCE SCHEDULE	122
BATTERY	126
CLEANING, CARE & STORAGE	130
CLEANING & CARE	131
WEATHERIZATION & DRY STORAGE.....	136
TECHNICAL INFORMATION	143
TRAILERING PROCEDURES.....	148
TRAILERING YOUR MOOMBA.....	149
LIMITED WARRANTY	155
OWNER'S RESPONSIBILITY/ ASSISTANCE.....	175
MAINTENANCE LOG	180



BOATING SAFETY

SAFETY KNOWLEDGE

Prior to operation, be certain that all passengers are aware of where the safety equipment is stowed, the location of all onboard emergency equipment such as fire extinguishers and how this equipment is used. In case of potential emergencies, be sure that at least one other person on-board understands how to operate the boat.

Your safety, as well as the safety of others with and around you, is a direct result of how you operate and maintain your boat. You—and anyone who will be operating this boat should read and seek to fully comprehend your Moomba Boats Owner's Manual, and any additional information provided by component manufacturers and suppliers. Make sure that you understand all of the controls and operating instructions before attempting to operate the boat. Improper operation is extremely dangerous!

Thank you for purchasing a Moomba boat. We hope your ownership results in an enjoyable and rewarding boating experience.

The basic safety rules are outlined in this section of the Owner's Manual. Additional precautions throughout the Owner's Manual are noted by the following symbols:



THIS IS THE SAFETY ALERT SYMBOL. IT IS USED TO ALERT YOU TO POTENTIAL PERSONAL INJURY HAZARDS. OBEY ALL SAFETY MESSAGES THAT FOLLOW THIS SYMBOL TO AVOID POSSIBLE INJURY OR DEATH.

SPECIAL ATTENTION SYMBOLS

As you read through this manual, you will find **CAUTION**, **WARNING** and **DANGER** symbols which require special attention. Please read them carefully! They may tell you how to avoid problems and/or endangering yourself, your passengers, and other boaters. **PLEASE REVIEW ALL SAFETY INFORMATION.**



In addition to everyday safety, failure to observe safety recommendations may result in severe personal injury or death to you or to others. Use caution and common sense when operating your boat. Don't take unnecessary chances!

Be certain that all boat passengers are aware of this information and conform to boat safety principles.

IMPORTANT SAFETY INFORMATION!

Your safety, as well as the safety of others with and around you, is a direct result of how you operate and maintain your boat. Read and comprehend this manual. Make sure that you understand all the controls and operating instructions before attempting to operate the boat. Improper operation is extremely dangerous.

The basic safety rules are outlined in this section of the manual. Additional precautions throughout the manual are noted by the following symbols:



This symbol indicates a potentially hazardous circumstance, which, if not avoided, may result in *minor or moderate injury*. It may also be used to alert against unsafe practices.



This symbol indicates a potentially hazardous situation, which, if not avoided, could result in *death or serious injury*.



This symbol indicates an imminently hazardous situation, which, if not avoided, will result in **death or serious injury**. This is limited to the most extreme situations.

The precautions listed in this manual and on the boat are not exhaustive. If a procedure, method, tool or part is not specifically recommended by Skier's Choice, you must satisfy yourself that it is safe for you and others, and that the boat will not be damaged or made unsafe as a result of your decision.

REMEMBER: ALWAYS USE COMMON SENSE WHEN OPERATING, SERVICING OR REPAIRING THE BOAT!

WARNING

Operating, servicing and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area and wear gloves or wash your hands frequently when servicing this vessel. For more information go to **www.P65warnings.ca.gov/marine**.

SAFE BOATING

Safe boating practices may seem obvious, but people have thought up risky and dangerous activities in boats, with boats, and behind boats. Just because you or your passengers have seen a boating maneuver performed or have seen a particular activity promoted, do not assume there is no risk of injury or death. Before you or your passengers go out in the boat and engage in any water sport activity, give careful consideration to the risks. Plan ahead. Think twice before you try something new behind your boat or with your boat. Know the limits of you, your passengers and your equipment and do not exceed them.

In addition to careful review of this manual, you should be aware as well that there are many sources of information available. Skier's Choice urges you to pursue additional training, such as safety and seamanship courses offered by the U.S. Coast Guard Auxiliary and the U.S. Power Squadron.

Safe boating and safe actions may seem obvious, yet every year US Coast Guard statistics give evidence that many people disregard safe boating practices. Do not take safety for granted. Think twice. We want all our boat owners and their passengers, friends, and families to have a safe and enjoyable experience on the water.

US COAST GUARD AUXILIARY BOATING SAFETY COURSE

The US Coast Guard offers an Auxiliary Boating Safety Course. It is recommended that new owners should consider taking these courses to provide a foundation of operational and safety instruction. You can find more information by visiting **www.uscgboating.org** or asking your dealer for more details.

SAFETY TRAINING ORGANIZATIONS

The following is a listing of just some of the agencies and organizations that offer safety training or information:

American Red Cross, National HQ

2025 E Street NW, Washington, DC 20006
(202) 303-4498 www.redcross.org

USA Waterski

1251 Holy Cow Rd., Polk City, FL 33868
(863) 324-4341 www.usawaterski.org

Boat Owners Association of the United States

880 South Pickett Street, Alexandria, VA 22304
(703) 461-4666, www.boatus.com

National Safe Boating Council

P.O. Box 509, Bristow, VA 20156
(703) 361-4294 www.safeboatingcouncil.org

On-Line Basic Boating Safety Course

www.boatsafe.com

Federal law requires certain safety equipment to be onboard at all times. In addition, responsible boaters carry other equipment in case of emergency. Check with the local boating authorities for any additional requirements over and above the federal stipulations.

US. Coast Guard Auxiliary Public Relations Center

9449 Watson Industrial Park, St. Louis, MO 63126
(877) 875-6296 www.cgaux.org

U.S. Power Squadron

P.O. Box 30423, Raleigh, NC 27622
(888) 367-8777, www.usps.org

National Marine Manufacturers Association

231 S. LaSalle Street, Suite 2050, Chicago, IL. 60604
(312) 946-6200, www.nmma.org

Water Sports Industry Association

P.O.Box 568512, Orlando, FL 32856-8512
(407) 835-1363, www.wsia.net

WATER SPORTS NAMES AND TERMINOLOGY

There are many types of towed water sports, and they are known by many different names. The more popular sports are wakeboarding, waterskiing, surfing, wakeskating and tubing. And there are many others. The terms used to describe participants in towed water sports activities also vary greatly. Typical terms include rider, skier, and wakeboarder. To keep the language in this manual straightforward, we use rider or skier to refer to a participant in any towed water sport. The terms ski, skiing, riding, surfing or wakeboarding are used to refer to any towed water sport.

SAFETY EQUIPMENT

Federal and Local laws require certain safety equipment to be onboard at all times. In addition, Responsible boaters carry equipment in case of an emergency. Check with local boating authorities for additional requirements over and above the federal requirements.

Some equipment includes:

- UL-approved Marine Fire Extinguisher
- ABYC-approved Marine Mufflers with water injection
- USCG-approved Marine Flame Arrestor
- USCG-approved Engine Box Ventilation with sparkless power blower
- ABYC-approved Electric Horn sound warning device
- USCG-approved inland lighting
- Rear Facing Mirror

SAFETY EQUIPMENT CONTINUED

Federal law also requires at least one Type I, II or III Personal Flotation Device (PFD) for each person on board or being towed on water skis or other recreational equipment. In addition, one throwable Type IV PFD must also be on board. As the owner, obtaining the appropriate PFDs is your responsibility. Your Moomba dealer can and will be happy to assist you.

NOTE: Requirements for coastal waters and inland waters differ. Check with the local authorities for more information.

A smart owner will avoid potential problems on an outing by having additional equipment on board. Normally, this equipment is dependent on the body of water and the length of the trip. We suggest the following—as a minimum. Your Moomba dealer can also assist you with additional recommendations.

- An anchor with at least 75 feet of line
- A manual bailing device for removing water
- A combination oar/boat hook
- A day-and-night visual distress signal
- A first aid kit and manual
- An airway breathing tube
- A waterproof flashlight
- A set of local navigation charts
- Mooring lines and fenders
- Extra engine oil
- A tool kit
- A portable AM/FM radio or weather radio
- VHF hand held marine radio
- Cell Phone

CAUTION Boating-related accidents are generally caused by the operator's failure to follow basic safety rules or written precautions. Most accidents can be avoided if the operator is completely familiar with the boat, its operation, and can recognize potentially hazardous situations before an accident occurs.

GENERAL SAFETY PRECAUTIONS

Failure to adhere to these precautions may result in severe injury or death to you and/or others.

WARNING

- Improper operation is extremely dangerous. Operators must read and understand all operating manuals supplied with the boat before operation.
- Remain seated at all times while the boat is in motion.
- Never stand or allow passengers to stand while the boat is moving. You or others may be thrown from the boat.
- Children in the bow of the boat should be accompanied by an adult at all times.
- Never operate the boat while under the influence of alcohol or drugs.
- On-board equipment must always conform to the governing federal, state, and local regulations.
- Gasoline vapors can explode. Before starting engine, open engine box, check engine compartment for gasoline vapors, and operate blower for at least four minutes. Run blower below cruising speed.
- Leaking fuel is a fire and explosion hazard. Inspect system regularly. Examine fuel tanks for leaks or corrosion at least annually.
- Never override or modify the engine safety shut-off switch or engine neutral starting safety switch in any way.
- Never remove or modify components of the fuel system in any way except for maintenance by qualified personnel. Tampering with fuel components may cause a hazardous condition. Never allow any type of spark or open flame on board. It may result in fire or explosion.
- It is the owner's responsibility to check tightness of the tower bolts BEFORE each use.
- The tower is designed to pull a single (1) rider or individual. DO NOT climb or sit on the tower. Rope may loop on inverted tricks. DO NOT sit behind the pulling point of the tower.
- Comply with the capacity limits stated on the capacity warning label in the boat.

⚠ DANGER

- To avoid serious personal injury, DO NOT be on or about the swim platform while engine is running and keep away from rear of boat while engine is running.
- To avoid serious personal injury, DO NOT operate engine while anyone is on or about the swim platform or in the water near the boat.

⚠ CAUTION

- The tow bar is not designed for vertical extensions. Any modifications to the tow bar or its mountings may result in damage to the boat and injury to the user.
- The tower may strike low objects. Check clearance height around docks, shore, overhanging objects, bridges and power lines.
- Do not pull past 45 degrees of the centerline of the boat. Failure to follow this rule could result in the boat capsizing.

⚠ CAUTION

- It is the driver's responsibility to ensure all passengers are seated when the boat is underway.

⚠ WARNING

Failure to adhere to these warnings may result in severe injury or death to you and/or others.

- This boat is a high-performance boat and capable of quick and tight turns and changes in direction. It is the driver's responsibility to operate the boat in a manner to ensure the safety of all passengers.

⚠ WARNING

Boaters must continuously be aware of weather conditions.

- Sudden storms, wind, lightning, etc., can unexpectedly put boaters in grave danger. Always check the local weather report before going boating.

⚠ WARNING

It is the driver's responsibility to determine if weather or other factors have created an unsafe boating environment.

- The driver is solely responsible for the consequences of their actions.

THE MOOMBA STANDARD

WATER SPORTS SAFETY

Riders are obligated to be as aware of the fundamental safety rules as well as the boat operator. If you are new to towed water sports, seek certified training before starting. You will find it especially helpful to join a local ski or wake club and USA Waterski when possible.

Always remember that the majority of water sports injuries are the result of impacts with other objects, so always look where you are going and be aware of what is going on around you and the rider.

WARNING

- Failure to adhere to these warnings may result in severe injury or death to you and/or others.
- Every rider must always wear a USCG-approved personal flotation device.
- Maintain a distance of at least 200 feet from all other objects, including but not limited to: other boats, piers, rafts, mooring and navigational buoys, pilings, abutments, shoreline or any other items.
 - **NOTE: local laws may require higher distance from all other objects**
- Always have an experienced driver and observer in the boat when skiing, wakeboarding, or wakesurf.
- Never ski, wakeboard, or wakesurf in shallow water, close to shore, or in water where you do not know the depth or what is beneath the surface.
- Never put your arm, head, or any other part of your body through the handle bridle of the rope nor wrap the line around any part of the body at any time.
- Never ski, wakeboard, or wakesurf at night, or directly in front of other boats.
- Never jump from a boat that is moving at any speed, nor enter or exit the water when the engine is running (ON).
- Make sure that everyone knows and uses approved skiing/towsport hand signals and common watersport courtesies
- Always operate the boat in a manner to ensure the safety of all passengers and riders.

SKI PYLON EXTENSIONS

The use of a ski pylon extension or extensions in excess of 7-feet vertical is not recommended by Moomba on our products. If you elect to use merchandise such as these, be aware that they could create excessive stress on your boat and subjectively cause damages not covered by the warranty.

CARBON MONOXIDE (CO)

Carbon monoxide is an odorless, colorless, extremely toxic gas. Symptoms of carbon monoxide poisoning are dizziness, ears ringing, headaches, nausea and unconsciousness. A poisoning victim's skin often turns cherry red.

Have the victim breathe fresh air deeply. If breathing stops, Resuscitate. A victim often revives, then relapses because organs are damaged by lack of oxygen. Seek immediate medical attention.

DANGER

Carbon monoxide is a colorless, odorless and tasteless gas. It is produced by gasoline engines and is a component of exhaust fumes.

Shut off the engine when people are on the swim platform or in the water around the rear of the boat.

Do not do any other activities which puts people in close proximity of the transom while the engine is running.

For the most current information on carbon monoxide, you may call, write or visit on-line any of the following:

United States Coast Guard

Office of Boating Safety (CG-5422)
2100 Second Street SW STOP 7581,
Washington, DC 20593-7581
1-800-368-5647 www.uscgboating.org

National Marine Manufacturers Association (NMMA) 231 S.

LaSalle St., Suite 2050, Chicago, IL 60604
312-946-6200 www.nmma.org

American Boat & Yacht Council, Inc.

613 Third St., Suite 10, Anapolis, MD 21403
410-956-4460 www.abycinc.org

PRODUCT MISUSE

Misuse of the product or use of it in a manner for which it was never intended can create dangerous situations. The driver and passengers are responsible for using the product safely and as intended. The driver must operate the boat in a manner that ensures the safety of all passengers. If you or your passengers are unsure about use of the product, about performing certain boating maneuvers or are unsure about a particular water activity, refer to this manual or contact a knowledgeable source such as your local dealer, Skier's Choice, Inc., the US Coast Guard, or your local boating authority.

WARNING California Proposition 65 Recreational Boats

Operating, servicing and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area and wear gloves or wash your hands frequently when servicing this vessel. For more information go to www.P65warnings.ca.gov/marine.

CAPACITY & WEIGHTING YOUR BOAT

Do not exceed the capacity warning label affixed to the boat in the helm area. The capacity limit is shown in the number of people and weight limit in pounds. The combined weight of people and gear must be considered when loading the boat.

Factory ballast and fuel have been considered in the capacity limit and do not need to be added to the people and gear weight. Ballast weight above factory installed equipment must be calculated into the total weight of people and gear.

Although water intrusion and waves spilling inside a boat is an obvious boating hazard, this hazard can increase when weighting your boat for water sports such as wakeboarding or wakesurfing. Do not overweight the boat or exceed boat capacity. Use good judgment when using unbalanced weight in your boat.

When loading your boat give separate attention to the bow area. Excess and unevenly distributed weight in the bow of the boat can create a water influx hazard, unstable steering conditions, and even loss of control. Driver visibility can be reduced if the bow is overloaded or unevenly weighted.

NOTE: It is the captain's responsibility to ensure that his/her sight line is unobstructed.

⚠ WARNING

Excess and improper loading of bow area forward of windshield may cause water influx, or bow swamping, operating instability, and loss of control resulting in injury or death. Bow Capacity Limit - Refer to seating capacities in this manual

Use good judgment when weighting your boat for any towed water sports. Educate yourself on the proper responses for the differing and potentially unsafe conditions you could encounter. * An unbalanced or overweight boat can be swamped with water from any direction.

Concentrating weight in a rear corner of the boat for wakesurfing puts the top of the deck closer to water level. Backwash, large waves and choppy water are more likely to swamp the boat in this situation.

PROPER SEATING

Proper seating is an important element of boating safety. Proper seating consists of sitting with your buttocks in full contact with a seat cushion within easy reach of a suitable handhold or grab rail anytime the boat is underway. Handholds and grab rails should be used to secure oneself and prevent loss of balance. Do not sit in locations not designed as a seat. For instance, do not sit on seat backs, do not sit on the sides or gunwale of the boat, and do not sit on the sundeck while the boat is in motion. See examples below of proper sitting positions.



The driver must be aware of all passenger's locations and positions, and passengers must stay alert to changes in direction.

⚠ CAUTION The boat is capable of quick and tight turns. Such maneuvers can cause unseated occupants to be thrown around or out of the boat. Alert passengers before changing direction.

MAXIMUM CAPACITIES

In compliance with United States Coast Guard Regulations, Moomba Boats meet or exceed all safety standards designed for recreational boats. To ensure safe handling and performance, each Moomba boat displays a maximum capacity sticker (see sample), stating the maximum total weight load allowable.

NOTICE: Refer to the Maximum Capacity Sticker on your boat for allowable loading.

WARNING

Do not exceed the maximum capacity of the boat.

COAST GUARD REGULATIONS

The United States Coast Guard boating regulations prescribe minimum standards of safety to be met and maintained by all watercraft. It is necessary that your boat remain in compliance with these regulations.


The staff at Skier's Choice, Inc. recommend that all boat operators complete a Coast Guard approved boating safety course.




Contact Information: If you have questions regarding the operation of your boat, accessory or options or questions in regard to Boat Safety, contact your dealer or Skier's Choice, Inc. at 865-983-9924.

SEATING CAPACITY

Each 2024 Model is marked below to illustrate designated seating positions

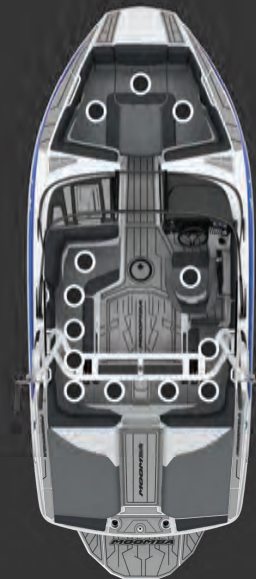

MONDO- 13 PASSENGERS

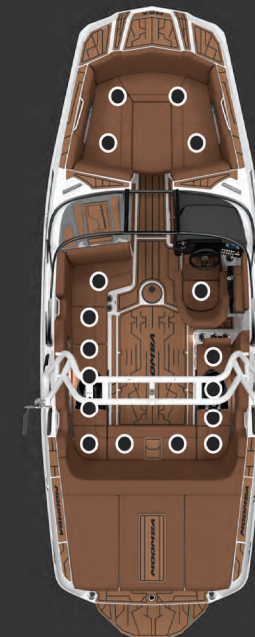




MAX- 17 PASSENGERS



TYKON- 18 PASSENGERS

SEATING CAPACITY

Each 2024 Model is marked below to illustrate designated seating positions

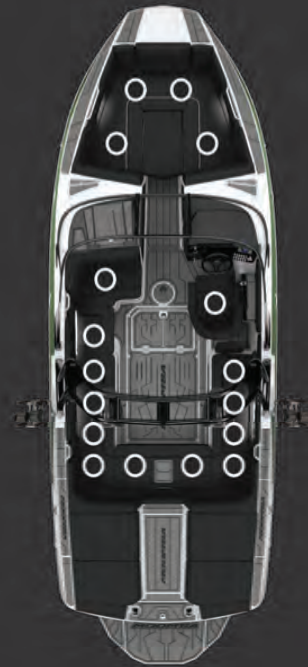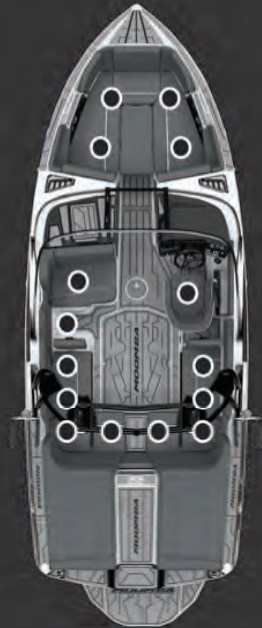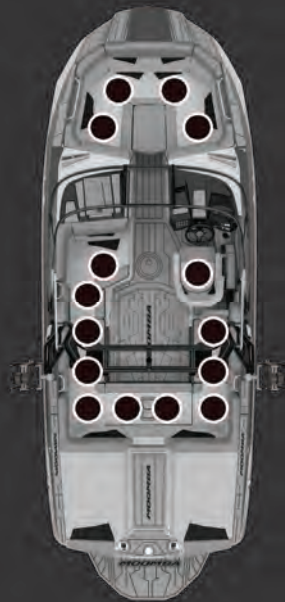


KAIYEN- 15 PASSENGERS

CRAZ- 15 PASSENGERS

MOJO- 17 PASSENGERS

MAKAI- 18 PASSENGERS

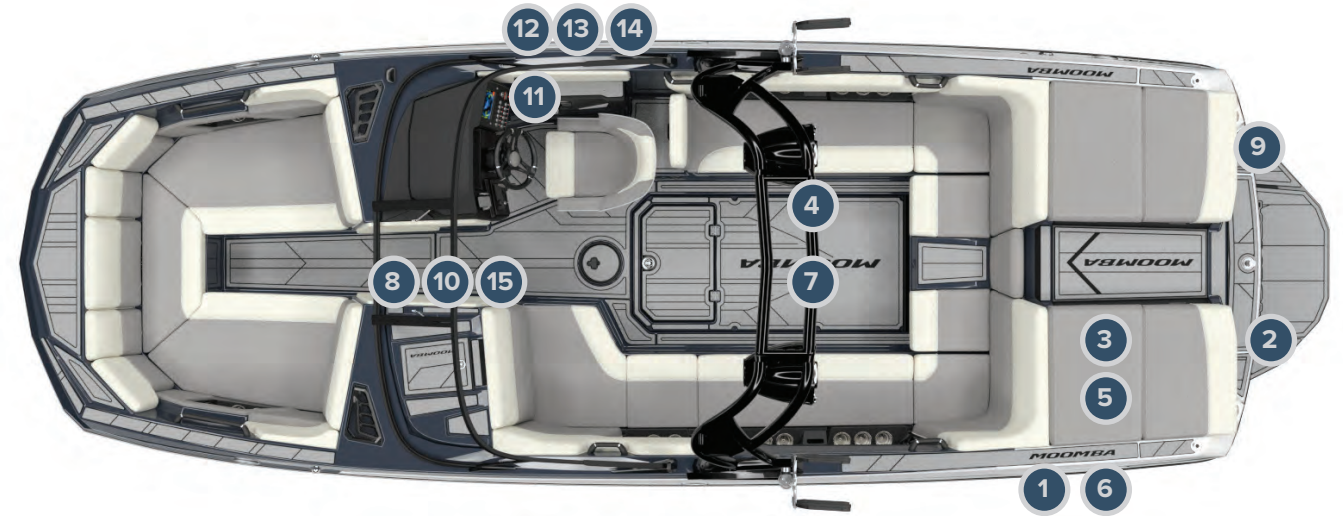

TYPICAL WARNING LABEL LOCATIONS ON A V-DRIVE MOOMBA MODEL

Warning labels are placed on your boat to alert you to potential hazards that may not be obvious. They also tell you how to avoid the hazard. Warning labels should never be removed and, if any label is damaged, it should be replaced as soon as possible.

** Warning Labels on following pages*

WARNING PLATES & LABELS

Read and note ALL warning plates and labels from bow to stern that appear on the boat, including these.

If your warning decals should become damaged in any way, please contact your Moomba dealer or write Skier's Choice, Inc. to request replacement warning decals. The decals will be provided free of charge. Your boat's serial number (located on the transom) must be included for warning decal requests.

1 **WARNING**

- AVOID SERIOUS INJURY OR DEATH.
- FIRE, EXPLOSION AND SPLASHING FUEL HAZARD.
- IF TANK IS OVERFILLED, FUEL WILL DISCHARGE OUT THIS PORT.

2 **WARNING**

- AVOID SERIOUS INJURY OR DEATH.
- TOW EYE SHOULD BE USED ONLY FOR TOWABLE WATER SPORTS DEVICES WITH 1 OR 2 INDIVIDUALS. TOW EYE WEIGHT LIMIT IS 800 LBS.
- DO NOT USE TOW EYE FOR OTHER TOWABLE OBJECTS OR TOWING BOATS.
- DO NOT USE TOW EYE TO LIFT BOAT.

3 **WARNING**

- AVOID SERIOUS INJURY OR DEATH.
- LEAKING FUEL IS A FIRE AND EXPLOSION HAZARD.
- INSPECT SYSTEM REGULARLY. EXAMINE FUEL SYSTEM FOR LEAKS AND CORROSION AT LEAST ANNUALLY.

4 **WARNING**

DO NOT TRAILER BOAT WITH ANY WAKEBOARDS, WATERSKIS, OR ANY OTHER RECREATIONAL TOWABLES IN THE BOARD RACKS. FAILURE TO FOLLOW THESE GUIDELINES CAN RESULT IN LOSS, DAMAGE, INJURY OR DEATH.

6 **WARNING**

The use of E-15 fuel in this vessel is prohibited by law. See Owners Manual for complete explanation.

5 **WARNING**

Failure to follow these warnings could cause SERIOUS INJURY or DEATH

- Only use this tow pylon for waterskiing, boarding, or recreational towables.
- Do not use this tow pylon for parasailing, kite flying, pyramids, group pulls, banzob/teaching booms, pylon extensions or towing other boats.
- Do not sit in the path of the tow line when it is in use.

7 **WARNING**

- Failure to follow these warnings while using the tower could cause serious injury or death.
- Lock the tower in place and secure all hardware before and during use.
- Do not tow more than 1 persons or 500 pounds at one time from this tower.
- Only use this tower for waterskiing, boarding, or recreational towables.
- Do not use this tower for parasailing, kite flying, pyramids, group pulls, towing other boats, or tubes.
- Do not climb on, sit on, stand on, jump off of or dive off of the tower.

8 **WARNING**

Failure to follow these warnings could cause serious injury or death

- REMAIN PROPERLY SEATED AND HOLD ON TO AVAILABLE HANDRAILS while boat is moving to avoid falling overboard or being ejected from the boat. Do not sit on the gunwales or deck edges. USCG APPROVED LIFE JACKETS should be on board for all passengers and on all towed participants.
- DO NOT EXCEED THE BOW CAPACITY of 5 persons or 700 pounds. Overloading the bow of the boat can cause loss of control, swamping and/or capsizing. DO NOT OBSTRUCT OPERATOR VISIBILITY. Operators must look a clear view in front of boat to avoid collisions.

9 **DANGER**

CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH. STAY CLEAR OF BOAT AND STAY OFF SWIM PLATFORM WHILE ENGINE IS RUNNING.

CARBON MONOXIDE (CO) CAN CAUSE BRAIN DAMAGE OR DEATH.

- Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
- Carbon monoxide will be around the back of the boat when engines or generators are running.

MOVE TO FRESH AIR, if you feel nausea, headache, dizziness, or drowsiness.

10 **BOATMAN'S CHECK LIST**

For your safety and enjoyment, check all of these items before you start the engine.

- ✓ WEATHER CONDITIONS - Safe to go out?
- ✓ CAPACITY PLATE - Are you properly loaded?
- ✓ PERSONAL FLOTATION DEVICES - Adequate types and number on board?
- ✓ EMERGENCY GEAR - Fire extinguisher, anchor with line, tool kit, signaling device, bailer, paddle, etc., on board?
- ✓ BATTERY - Fully charged? Cable terminals clean and tight?
- ✓ STEERING SYSTEM - Working smoothly and properly?
- ✓ FUEL SYSTEM - Adequate fuel? Any leaks or fumes?
- ✓ ENGINE - In neutral?
- ✓ ELECTRICAL EQUIPMENT - Lights, horn, pump working properly?
- ✓ BILGE PUMP - Working properly and free of debris?
- ✓ DRAIN PLUG - Securely in place?

11 **WARNING**

Failure to follow these warnings could cause SERIOUS INJURY or DEATH

- GASOLINE VAPORS CAN EXPLODE. BEFORE STARTING ENGINE:
 - OPERATE BLOWER for 4 minutes
 - CHECK THE ENGINE COMPARTMENT for gasoline vapors by sight and smell.
- OPERATE BLOWER to clear gasoline vapors from engine compartment when engine is at idle, while below cruising speed and after stopping engines.
- CARBON MONOXIDE (CO) CAN CAUSE BRAIN DAMAGE OR DEATH.
 - Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
 - Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.
 - MOVE TO FRESH AIR if anyone shows signs of carbon monoxide poisoning or being ejected from the boat. SEE OWNER'S MANUAL for additional information regarding carbon monoxide poisoning.
- CHECK WEATHER FORECAST BEFORE DEPARTING DOCK and heed all weather advisories.
- WEAR SAFETY LANYARD at all times while operating boat to prevent unmanned boat operation.
- NEVER OPERATE WHILE UNDER THE INFLUENCE of drugs or alcohol.
- DO NOT OVERLOAD THE BOAT. ENSURE THAT WEIGHT IS PROPERLY AND EVENLY DISTRIBUTED fore and aft and on both sides of the boat to avoid poor handling, sudden loss of control, swamping and/or capsizing.
- PASSENGERS SHOULD WEAR U.S. COAST GUARD APPROVED LIFE JACKETS.
- MAKE SURE THAT ALL PASSENGERS ARE PROPERLY SEATED WHILE UNDERWAY. To avoid passengers falling overboard or being ejected from the boat, do not allow passengers to sit on seat backs, gunwales or outermost deck edges while boat is moving.
- REDUCE SPEED BEFORE ATTEMPTING SUDDEN OR SHARP TURNS. AND MAINTAIN SAFE SPEEDS for water conditions and environment at all times. Maneuverability at high speeds is limited, and sudden turns may cause loss of boat control.
- KEEP PROPER LOOKOUT AND SAFE DISTANCE for the conditions at all times to avoid collisions.
- OBEY APPLICABLE NAVIGATION RULES AND BOATING LAWS.
- USE CAUTION AND PROPER LIGHTING during nighttime boating and boating in adverse weather.
- READ THE OWNER'S MANUAL AND COMPLETE THE BOATER'S PRE-OPERATION CHECKLIST prior to boat operation.
- THE DRIVER IS RESPONSIBLE for operating boat in manner that ensures safety of passengers.

12

⚠ DANGER

- CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH.
- SHUT OFF ENGINES while people are in the water near the boat, on the swim platform, or on the boarding ladder.
- NEVER OPERATE IN REVERSE TOWARD A PERSON in the water.



13

*** MODEL SPECIFIC****⚠ WARNING**

Failure to follow these warnings could cause serious injury or death



Remain properly seated and hold on to available handrails while boat is moving to avoid falling overboard or being ejected from the boat. Do not sit on gunwales or deck edges.

Do not overload the boat. Occupants and gear must be evenly distributed on both sides of the boat to avoid poor handling, sudden loss of control, swamping and/or capsizing.

Refer to your specific model's Designated Occupant Positions depicted in the Owner's Manual.

Keep limbs and body clear of all tow lines at all times to avoid entanglement and other types of injuries.

USCG approved life jackets should be on board for all passengers and all towed participants.



14

*** MODEL SPECIFIC****MAXIMUM CAPACITIES**

18 PERSONS OR 2500 LBS.
2500 LBS. PERSONS, GEAR

THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION

MANUFACTURER: SKIER'S CHOICE, INC.
MOOMBA TYKON MARYVILLE, TN

15

*** MODEL SPECIFIC****⚠ WARNING**

Failure to follow these warnings could cause serious injury or death



REMAIN PROPERLY SEATED AND HOLD ON TO AVAILABLE HANDRAILS while boat is moving to avoid falling overboard or being ejected from the boat. Do not sit on the gunwales or deck edges.

USCG APPROVED LIFE JACKETS should be on board for all passengers and on all towed participants.



DO NOT EXCEED THE BOW CAPACITY of 5 persons or 700 pounds. Overloading the bow of the boat can cause loss of control, swamping and/or capsizing.

DO NOT OBSTRUCT OPERATOR VISIBILITY. Operators must have a clear view in front of them to avoid collisions.



EMERGENCY PROCEDURES

The time to think about emergencies is before they happen. Plan ahead. Know what to do before you encounter any of these situations. Wear a PFD (Personal Flotation Device) when boating.

* Reprinted from " Fishing & Skiing boats Owner's Manual with permission from the NMMA

EXPLOSION & FIRE



EXPLOSION/FIRE/ASPHYXIATION HAZARD

Open flame cooking appliances consume oxygen. This can cause asphyxiation or death.

- Maintain open ventilation.
- Liquid fuel may ignite, causing severe burns.
- Use fuel appropriate for type of stove.
- Turn off stove burner before filling.
- Do not use stove for comfort heating.

FIRE/ASPHYXIATION HAZARD

Use special care with flames or high temperatures near urethane foam, if used in construction of your boat. Burning, welding, lights, cigarettes, space heaters and the like can ignite urethane foam. Once ignited, it burns rapidly, producing extreme heat, releasing hazardous gases and consuming much oxygen.

EXPLOSION

- If explosion is imminent, put on PFDs, grab distress signals and survival gear, and immediately abandon ship.

FIRE

- Turn off engines, generators, stoves and blowers.
- Extinguish smoking materials.
- Fixed fire suppression system, if equipped, has heat sensors that automatically flood machinery space with a fire extinguishant.
- Allow extinguishant to “soak” compartment for at least 15 minutes to cool hot metals or fuel before cautiously inspecting fire area. Have portable fire extinguishers ready. Do not breathe fumes or vapors caused by the fire or extinguishant.
- If no fixed firefighting system is installed and fire is in engine compartment, discharge portable fire extinguishers through the transmission cover which is typically located under the rear seat. Do not open engine hatch as this feeds oxygen to the fire.
- If you have access to fire, direct contents of extinguishers at base of flames, not at the top.
- Throw burning materials overboard if possible.
- Move anyone not needed for firefighting operations away from the flames.
- Signal for help.
- Put on PFDs, grab distress signals and survival gear, and prepare to abandon ship.

ABANDONING SHIP



BURN HAZARD

Swim against the current or wind if you abandon ship. Leaking fuel will float with the current and may ignite.

- When clear of danger, account for all who were on board, and help those in need.
- Use distress signal.
- Keep everyone together to make rescue easier.

FLOODING, SWAMPING OR CAPSIZING

- **STAY WITH THE BOAT!** A boat will usually float even if there is major hull damage. Rescuers can spot a boat much easier than a head bobbing in the water.
- Signal for help.

COLLISION

- Account for everyone on board.
- Check for injuries.
- Inspect structural damage.
- Reduce flooding.
- Signal for help.
- **STAY WITH THE BOAT!**

LEAKS

- Immediately switch on bilge pumps.
- Assign crew to operate manual pumps, if needed.
- If boat is taking on water, have someone take the helm while you manage damage control.
- Slow or stop to minimize inflow. However, if you can keep a hole above water by maintaining speed, do so.
- If possible, patch the outside with whatever material is available.

GROUNDING

Action depends on how hard the boat hits bottom and whether the boat remains stranded. If it is a simple touch, you may need only to inspect the hull. If you are aground, assess the situation before reacting. In some cases, throwing the boat into reverse can cause more damage.

BASIC GUIDELINES

- Inspect damage to hull, propulsion and steering systems.
- Check for leaks. If water is coming in, stopping the flow takes priority over getting free.
- Determine water depth all around the boat and type of bottom (sand, mud, rocks, etc.). This will help you decide which way to move the boat.
- Determine if tide, wind or current will drive the boat harder aground or will help free it.

TOWING



PERSONAL INJURY HAZARD

Towing or being towed stresses the boats, hardware, and lines. Failure of any part can seriously injure people or damage the boat

A recreational boat towing another is usually a last resort because of possible damage to one or both boats. The Coast Guard or a private salvage company is better equipped. A recreational boat may assist by standing by, and possibly keeping the disabled boat's bow at a proper angle until help arrives. Only when conditions are ideal—that is, waters are calm, disabled boat is small, and one or both skippers know correct technique—should a recreational boat tow another. When clear of danger, account for all who were on board, and help those in need.

TOWING VESSEL

- Be sure your boat will not run aground too.
- Because you are maneuverable and the grounded boat is not, you should pass the towline to the grounded boat.
- Use double-braided or braid-on-braid line. Never use three-strand twisted nylon; it has too much elasticity and can snap back dangerously.
- Fasten the towline as far forward as possible on the upwind or up-current side of the towing boat.
- Fastening it to the stern will restrict maneuverability of the towing boat.
- If possible, use a boat bridle.
- Move slowly to prevent sudden strain on slack line.
- Be ready to cast loose or cut the line if the towing situation becomes hazardous.

VESSEL BRING TOWED

- Attach the towline to the bow eye.
- If the boat has eyebolts in the transom for pulling skiers, a towline may be attached to a small bridle hooked to both eyebolts.
- If it is necessary to be towed after being freed, keep someone at the wheel to steer.

BOTH VESSELS

- If you attach the towline to a fitting, be sure the fitting is fastened with a through bolt and is reinforced on the underside.
- Creating a bridle with a line around the hull or superstructure will distribute the load over a wide area; pad pressure points. This technique can be used on both the towing and towed boat.
- Keep lines clear of propellers on both boats.
- Keep hands and feet clear of the other boat.
- Stay clear of lines used to tow. Ropes can snap and recoil causing serious injury.
- Never hold a towline after it is pulled taut

PERSON OVERBOARD

- Immediately sound an alarm and keep pointing to the person overboard.
- Throw a life preserver even if the person is wearing a PFD. It will serve as a marker.
- Immediately stop or slow the boat, then circle toward the victim.
- Keep person overboard on helm side so operator has the person constantly in sight.
- Approach from downwind and move alongside into the wind for pickup.
- When almost alongside, stop the engine in gear to prevent dangerous propeller “windmilling.”
- As part of your emergency plan, consider what to do if you were alone and fell overboard (*e.g., wear PFD, keep signal device in PFD, attach emergency stop switch lanyard to yourself*).

DROWNING

- Swim to rescue a drowning victim only as a last resort.
- Immediate resuscitation is critical! At least two people on board should be certified in CPR.
- Keep the victim warm.
- Use care in handling. Spinal injury may exist if the victim fell overboard.
- Signal for help.

MEDICAL EMERGENCY

- In an emergency, you may be far from professional medical assistance. Be prepared. Take a first aid course, and carry a first aid kit. Be aware of special conditions that may affect anyone on board.

CARBON MONOXIDE

Carbon monoxide is an odorless, colorless, extremely toxic gas. Symptoms of carbon monoxide poisoning are dizziness, ears ringing, headaches, nausea and unconsciousness. A poisoning victim's skin often turns cherry red.

Have the victim breathe fresh air deeply. If breathing stops, resuscitate. A victim often revives, then relapses because organs are damaged by lack of oxygen. Seek immediate medical attention.

PROPULSION, CONTROL, OR STEERING FAILURES

- Shut off engine.
- Put out an anchor to prevent drifting.
- Determine if you can fix the problem yourself. See engine operator's manual if engine is flooded.
- Signal for help.

RADIO COMMUNICATION

Radio is the boat operator's main method of receiving safety information and summoning aid. VHF-FM radio is the primary means of short-range communication. Single sideband radio (SSB) is used for longer range communication.

VHF-FM Channel 16 and SSB 2182 kHz are designated for emergency use. Such situations can be categorized as:

- **Emergency** — "MAYDAY, MAYDAY, MAYDAY" — Used when a life or vessel is in imminent danger.
- **Urgency** — "PAN-PAN, PAN-PAN, PAN-PAN" (pronounced PAHN-PAHN) — Used when a person or vessel is in some jeopardy less than indicated by a Mayday call.
- **Safety** — "SECURITY, SECURITY, SECURITY" (pronounced SAY-CURE-IT-TAY) — Used for navigational safety or weather warning.

An emergency situation will be hectic and there will not be time to learn proper radio procedure. **LEARN WHAT TO DO BEFORE YOU NEED TO DO IT.**

If you hear a distress call, stop all radio transmissions. If you can directly assist, respond on the emergency frequency. If you cannot assist, do not transmit on that frequency. However, continue to monitor until it is obvious that help is being provided.

DISTRESS SIGNALS

Consult your national boating law enforcement agency.

VISUAL DISTRESS SIGNALS

- U.S. Coast Guard regulations require boats in coastal waters and the Great Lakes to carry visual distress signals for day or night use, as appropriate for the time of operation. Exempt from the day signals requirement, but not night signals, are boats less than 4.8 meters (16 feet), open sailboats less than 7.9 meters (26 feet), boats participating in organized events, and manually propelled boats.
- If you are required to have visual distress signals, at least three safety-approved pyrotechnic devices in serviceable condition must be readily accessible. They must be marked with a date showing the service life, which must not be expired.
- Carry three signals for day use and three signals for night use. Some pyrotechnic signals, such as red flares, meet both day and night use requirements.
- Store pyrotechnic signals in a cool, dry location. An orange or red watertight container prominently marked “Distress Signals” is recommended.

Other recognized visual distress signals include:

- Flames in a bucket
- Square flag and ball
- Orange flag (certified)
- Dye marker (any color)
- U.S. ensign flown upside down
- Code flags November and Charlie
- Black square and ball on orange background flag
- Electric distress light (certified) - for night use only.
- Person waving arms

AUDIBLE DISTRESS SIGNALS

U.S. Coast Guard regulations require one hand, mouth or power-operated whistle or horn, audible for at least a half mile.

- Other recognized audible distress signals include:
- Radio communication (see Emergency Procedures - Radio Procedures
- Radio Communication)
- Radio-telegraph alarm
- Position indicating radio beacon
- Morse Code SOS (3 short, 3 long, 3 short) sounded by any means
- Fog horn sounded continuously

BOATING RULES



BASIC BOATING RULES

You should be aware of these rules and follow them whenever you encounter another vessel on the water. The rules presented in this manual are condensed and have been provided as a convenience only. Consult your local U.S. Coast Guard Auxiliary (USCGA) or Department of Motor Vehicles (DMV) for a complete set of rules governing the waters in which you will be using your boat. If you plan to travel—even for a short trip—you would be well served to contact the regional USCGA or DMV in the area where you will be boating.

Review and understand all local and state laws.

Any time two vessels on the water meet one another, one vessel has the right-of-way. It is called the stand-on vessel. The vessel which does NOT have the right-of-way is called the give-way or burdened vessel.

These rules determine which vessel has the right-of-way, and accordingly, what each vessel should do.

The vessel with the right-of-way has the duty to continue its course and speed, except to avoid an immediate collision. When you maintain your direction and speed, the other vessel will be able to determine how best to avoid you.

The vessel which does not have the right-of-way has the duty to take positive and timely action to stay out of the way of the stand-on vessel. Normally, the give-way vessel should not cross in front of the stand-on vessel. Slow down or change directions briefly and pass behind the other vessel. You should always move in such a way that the stand-on operator can see what you are doing. This rule is called Rule 2 in the International Rules and says, "In obeying and construing these rules due regard shall be had to all dangers of navigation and collision, and to any special circumstances, which may render a departure from the above rules necessary in order to avoid immediate danger."

ENCOUNTERING OTHER VESSELS


There are three main situations in which you may encounter other vessels and you must observe the Steering Rules in order to avoid a collision. These are:

- **Meeting** (you are approaching another vessel head-on)
- **Crossing** (you are traveling across the other vessel's path)
- **Overtaking** (you are passing or being passed by another vessel)

Using the following illustration in which you are the boat in the center, you should give right-of-way to all vessels shown in the white area. In this instance, you are the give-way vessel. All vessels in the shaded area must yield to you as you are the stand-on vessel. Both you and the meeting vessel must alter course to avoid each other.



If you are meeting another power vessel head-on, and you are close enough to run the risk of collision, neither of you has the right-of-way. Both of you should alter course to avoid an accident. You should keep the other vessel on your port (left) side. This rule doesn't apply if both of you can clear each other by continuing your set course and speed.

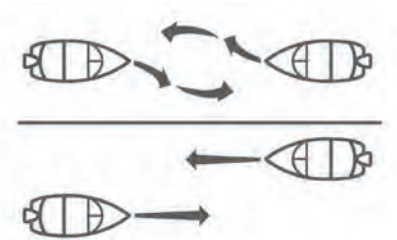


When two power-driven vessels are crossing each other's path close enough to run the risk of collision, the vessel that views the crossing vessel to the starboard (right) side must give-way. If the other vessel is to the port (left) side, maintain your course and direction, provided the other vessel gives you the right-of-way as it should.

If you are passing another vessel, you are the give-way vessel. This means that the other vessel is expected to maintain its course and speed. You must stay out of its way as you clear it, altering course and speed as necessary. Conversely, if you are being passed by another vessel, you should maintain your speed and direction so that the other vessel can steer itself around you.

There are three other rules to always remember when driving your boat around other vessels. When navigating in narrow channels, you should keep to the right when it is safe and practical to do so. If the operator of a powerdriven vessel is preparing to go around a bend that may obstruct the view of other water vessels, the operator should sound a prolonged blast on the whistle or horn—four to six seconds.

If another vessel is around the bend, it too should sound the whistle or horn. Even if no reply is heard, however, the vessel should still proceed around the bend with caution.

If you navigate these type of waters, you should carry a portable air horn, which are available from local marine supply stores.

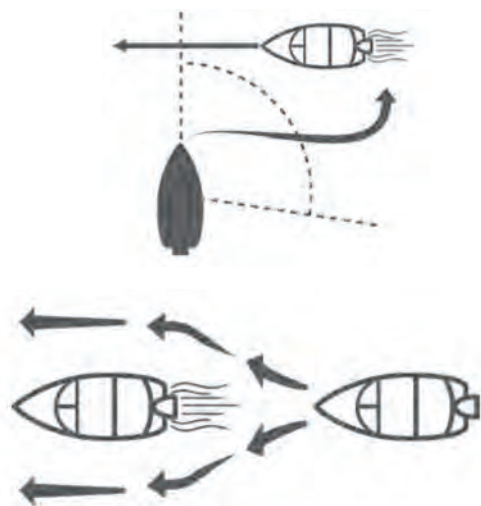

All vessels which are fishing with nets, lines or trawls are considered under International Rules to be fishing vessels. Boats with trolling lines are not considered fishing vessels.

Fishing vessels have the right-of-way, regardless of position. These vessels, however, cannot impede the passage of other vessels in narrow channels.

Sailing vessels should normally be given the right-of-way. The exceptions to this are:

- When the sailing vessel is overtaking the power-driven vessel, the power-driven vessel has the right-of-way.
- Sailing vessels should keep clear of any fishing vessel.
- In a narrow channel, a sailing vessel should not hamper the safe passage of a power-driven vessel which can navigate only in such a channel.


The waters of the United States are marked for safe navigation by the lateral system of buoyage. The markers and buoys you will encounter have an arrangement of shapes, colors, numbers and lights to show which side of the buoy a boater should pass when navigating in a particular direction.

The markings on these buoys are oriented from the perspective of being entered from seaward while the boater is going towards the port. This means that red buoys are passed on the starboard (right) side when proceeding from open water into port, and black buoys are to port (left) side. When navigating out of port, your position to the buoys should be reversed: red buoys to port and black buoys to starboard.

Many boating bodies of water are entirely within the boundaries of a single state. The Uniform State Waterway Marking Systems has been devised for these waters. This system uses buoys and signs with distinctive shapes and colors to show regulatory or advisory information.

These markers are white with black letters and orange borders. The information signifies speed zones, restricted areas, danger areas and general information.

Remember: Markings may vary by geographic location. Always consult local boating authorities before driving your boat in unfamiliar waters.

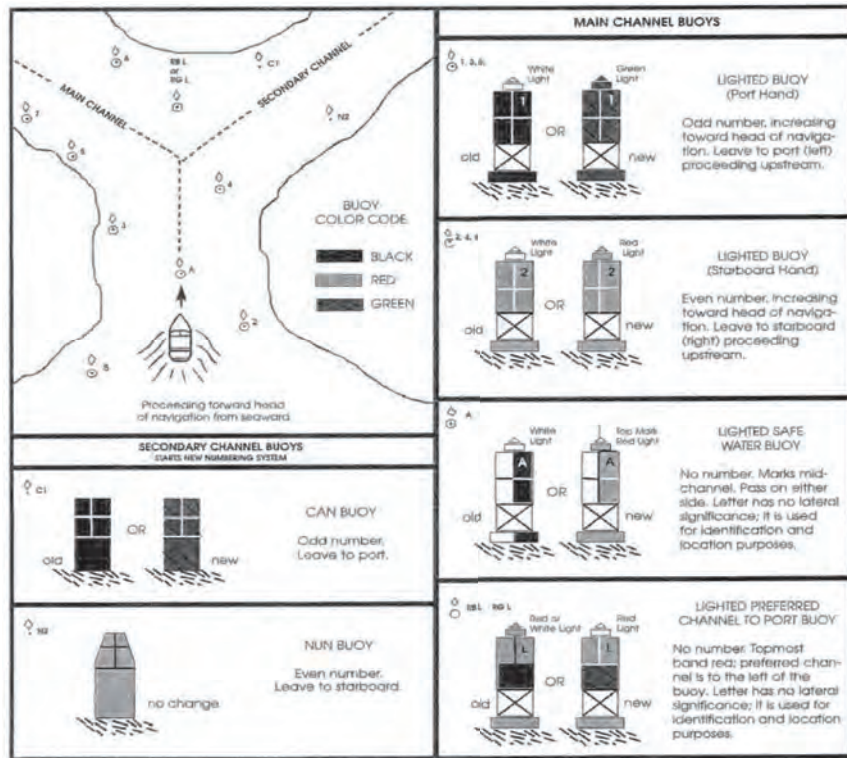

MONDO



Overall Length w/o Platform.....	20'
Overall Length w/Platform.....	22'
Overall Length w/Platform & Trailer.....	23'9"
Width (Beam).....	102"
Overall Width w/Trailer.....	102"
Draft.....	26"
Weight - Boat Only.....	4,000 lbs
Weight - Boat & Trailer.....	4,900 lbs
Height-On Trailer W/Tower Up.....	125.5"
Height-On Trailer W/Tower Down (A3).....	100"
Height-On Trailer W/Tower Down (Pro)	94.5"
Capacity - Passenger	13
Capacity - Weight	2,000 lbs
Capacity - Fuel.....	39 gals
Capacity - Ballast (Standard)	3,700 lbs
Engine.....	Raptor 400...6.2L

* Note: Add weight of fuel, Batteries, Options & Gear to determine true boat weight

MAX



Overall Length w/o Platform.....	22'6"
Overall Length w/Platform.....	24'6"
Overall Length w/Platform & Trailer.....	26'8"
Width (Beam).....	102"
Overall Width w/Trailer.....	102"
Draft.....	27.5"
Weight - Boat Only.....	4,500 lbs
Weight - Boat & Trailer.....	5,700 lbs
Height-On Trailer W/Tower Up.....	129"
Height-On Trailer W/Tower Down (A3).....	103.5"
Height-On Trailer W/Tower Down (Pro)	98"
Capacity - Passenger	17
Capacity - Weight	2,800 lbs
Capacity - Fuel.....	65 gals
Capacity - Ballast (Standard)	4,000 lbs
Engine.....	Raptor 400... 6.2L
Engine.....	Raptor 450... 6.2L

* Note: Add weight of fuel, Batteries, Options & Gear to determine true boat weight



TYKON

Overall Length w/o Platform.....	24'
Overall Length w/Platform.....	26'
Overall Length w/Platform & Trailer.....	28'2"
Width (Beam).....	102"
Overall Width w/Trailer.....	102"
Draft.....	28"
Weight - Boat Only.....	5,500 lbs
Weight - Boat & Trailer.....	6,700 lbs
Height-On Trailer W/Tower Up.....	131"
Height-On Trailer W/Tower Down (A3).....	105.5"
Height-On Trailer W/Tower Down (Pro)	100"
Capacity - Passenger	18
Capacity - Weight	2,500 lbs
Capacity - Fuel.....	70 gals
Capacity - Ballast (Standard)	4,500 lbs
Engine.....	Raptor 400... 6.2L
Engine.....	Raptor 450... 6.2L
Engine.....	Raptor 550... 6.2L

* Note: Add weight of fuel, Batteries, Options & Gear to determine true boat weight



KAIYEN

Overall Length w/o Platform.....	21'5"
Overall Length w/Platform.....	23'5"
Overall Length w/Platform & Trailer.....	25'2"
Width (Beam).....	102"
Overall Width w/Trailer.....	102"
Draft.....	27.5"
Weight - Boat Only.....	4,500 lbs
Weight - Boat & Trailer.....	5,700 lbs
Height-On Trailer W/Tower Up.....	126"
Height-On Trailer W/Tower Down (Pro)	95"
Capacity - Passenger	15
Capacity - Weight	2,100 lbs
Capacity - Fuel.....	45 gals
Capacity - Ballast (Standard)	3,700 lbs
Engine.....	Raptor 400..... 6.2L

* Note: Add weight of fuel, Batteries, Options & Gear to determine true boat weight



CRAZ

Overall Length w/o Platform.....	22'
Overall Length w/Platform.....	24'
Overall Length w/Platform & Trailer.....	26'2"
Width (Beam).....	102"
Overall Width w/Trailer.....	102"
Draft.....	27.5"
Weight - Boat Only.....	4,700 lbs
Weight - Boat & Trailer.....	5,900 lbs
Height-On Trailer W/Tower Up.....	130"
Height-On Trailer W/Tower Down (Pro)	99"
Capacity - Passenger	15
Capacity - Weight	2,400 lbs
Capacity - Fuel.....	70 gals
Capacity - Ballast (Standard)	4,500 lbs
Engine.....	Raptor 400... 6.2L
Engine.....	Raptor 450... 6.2L

* Note: Add weight of fuel, Batteries, Options & Gear to determine true boat weight



MOJO

Overall Length w/o Platform.....	23'
Overall Length w/Platform.....	25'
Overall Length w/Platform & Trailer.....	27'2"
Width (Beam).....	102"
Overall Width w/Trailer.....	102"
Draft.....	28"
Weight - Boat Only.....	4,800 lbs
Weight - Boat & Trailer.....	6,000 lbs
Height-On Trailer W/Tower Up.....	128.5"
Height-On Trailer W/Tower Down (Pro)	97.5"
Height-On Trailer W/Tower Down (E-Pex).....	93.5"
Capacity - Passenger	17
Capacity - Weight	2,500 lbs
Capacity - Fuel.....	70 gals
Capacity - Ballast (Standard)	4,000 lbs
Engine.....	Raptor 400... 6.2L
Engine.....	Raptor 450... 6.2L
Engine.....	Raptor 550... 6.2L

* Note: Add weight of fuel, Batteries, Options & Gear to determine true boat weight



MAKAI

Overall Length w/o Platform.....	24'5"
Overall Length w/Platform.....	26'5"
Overall Length w/Platform & Trailer.....	28'7"
Width (Beam).....	102"
Overall Width w/Trailer.....	102"
Draft.....	28'
Weight - Boat Only.....	5,200 lbs
Weight - Boat & Trailer.....	6,400 lbs
Height-On Trailer W/Tower Up.....	128.5"
Height-On Trailer W/Tower Down (Pro)	97.5"
Height-On Trailer W/Tower Down (E-Pex).....	93.5"
Capacity - Passenger	18
Capacity - Weight	2,500 lbs
Capacity - Fuel.....	70 gals
Capacity - Ballast (Standard)	4,000 lbs
Engine.....	Raptor 400... 6.2L
Engine.....	Raptor 450... 6.2L
Engine.....	Raptor 550... 6.2L

* Note: Add weight of fuel, Batteries, Options & Gear to determine true boat weight



BREAK-IN PERIOD AND FUEL INFORMATION

ENGINE BREAK-IN PERIOD

Taking care to properly break in your new engine will pay off in the long run. In our years of field testing, we have proven that an Indmar engine, when properly broken in according to our simple procedures, will last longer, run better and have fewer repairs over its lifetime.

BREAK IN PERIOD

Your new engine does not require an elaborate break-in procedure. Just follow these simple instructions and you are off to a great start. The three (3) most important aspects of new engine break-in are:

1. Avoid running engine at high speeds.
2. Do not carry a heavy load (passengers, gear, etc.).
3. Vary your boat speed during break-in. Don't run at the same RPM for a long period of time.

BREAK-IN STEPS

- For the first hour, do not exceed 2,000 RPM.
- For the second hour, do not exceed 3,000 RPM.
- For the next seven hours, do not exceed 4,000 RPM and vary the RPM regularly

BREAK-IN TIPS

- Avoid fast accelerations and don't carry (or pull) a heavy load during this period.
- Always let engine warm up gradually before acceleration.
- Check oil frequently. During the first 50 to 100 hours, an engine can use more oil than usual. Maintain oil at a proper level at all times (do not overfill).
- Monitor transmission fluid levels.
- Report abnormal noises or vibrations to your dealer.
- Keep an eye out for loose mountings, fittings, nuts, bolts, and clamps.

During the BREAK-IN process, engine temperature should be carefully monitored and speed should be reduced if overheating is evident. **ALSO, PLEASE REFER TO ENGINE OWNER'S MANUAL FOR BREAK-IN INFORMATION.**

NOTICE: PLEASE REFER TO ENGINE OWNER'S MANUAL for maximum RPM and engine break-in procedure.


CAUTION

Do not exceed maximum RPM recommended for your engine. Exceeding the maximum RPM may result in damage to the engine.

DANGER

Before starting your engine you must open the engine box and check engine compartment and bilge for gasoline and oil vapors.

FILLING THE TANK

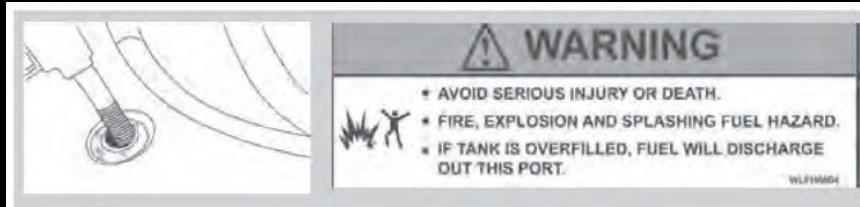

CAUTION

Be especially careful when filling the fuel tank. **DO NOT** over fill the tank. Fuel may empty through the fuel vent and damage to finishes could result.

If fuel is spilled on stripes or decals, apply a common bath cleaner (nonabrasive) and wipe with a damp cloth. Rinse the spill area with clean water.

WARNING

E15 FUEL WARNING

DO NOT USE E15 FUELS! E15 fuel WILL damage your engine and it will not operate.

THIS DAMAGE IS NOT COVERED BY ANY WARRANTY

**See www.epa.gov for more information regarding E15 Laws*

FUEL PRECAUTIONS

Use a gasoline with a minimum octane rating of 89. The Supercharged engine should use a minimum octane rating of 93. See engine owner's manual for more information.

WARNING

DO NOT use gasoline containing methyl alcohol (methanol) or octane "Boosters". Methanol can damage your boat's fuel system.

CAUTION

Gasoline Stabilizer should be added to the fuel tank when the boat is used infrequently or whenever your boat will not be used for two weeks or more. During storage, always add Gasoline Stabilizer to reduce gumming or tank sludge.

CAUTION

E-10 fuels require fuel stabilizers that are specifically designed for E-10 fuels to help prevent moisture absorption, phase separation and gasoline stabilization.

WARNING

Sparks while fueling could cause an explosion!

DANGER

Gasoline vapors are highly explosive!



BEFORE FUELING:

1. Turn off engine.
2. Turn off all electrical systems.
3. Extinguish cigarettes or any open flame

WHILE FUELING:

Keep fuel hose nozzle in contact with fill pipe to provide grounding.

Fill tank at a slow rate to avoid spills.



FUEL VENT

The fuel cap is located on the rear deck, 2-4 feet from the stern. To open, push the black tab located on the bottom side of the gas cap. When the black tab is pushed, the gas cap will hinge upward. To close, push the gas cap down. When the gas cap is completely closed a “click” sound should be heard. The audible “click” ensures that the gas cap is closed and sealed.

This boat has an EPA compliant fuel system which uses valves and a carbon canister.

Note: The boat angle during fueling may effect the amount of fuel your tank will accept.

This venting system doesn't allow water to enter the fuel system. In the unlikely event that water runs up against the fuel vent, the fuel vent has a one-way valve. The one way valve allows for air to release, but denies water from entering. The gas cap itself is sealed with a rubber seal. When the gas cap is “clicked” closed the seal prevents any water from entering the system.

FUEL TANK PUMP

Your boat contains a fuel system that is designed using current fuel delivery technology. The common terminology for this type of system is: Pump in Tank.

The system consists of a dual high pressure pump canister that is mounted inside the fuel tank. On the top of the canister there is a fuel pressure regulator. The engine's fuel lines are connected to the in tank fuel pump via a specially designed shielded, flexible high pressure fuel hose. This hose is pressurized. This system requires special tools and knowledge to service and maintain and as such is not owner serviceable.

The fuel filter for the boat's fuel delivery system is in the fuel tank. This style filter system is considered a lifetime filter under normal circumstances. A second filter is located on the engine, consult the engine owner's manual for more information.

The pump in tank fuel delivery system uses the fuel to lubricate and cool the fuel pumps. Running the pumps with very low fuel levels or running the pumps without fuel in the tank can induce air into the pumps which may shorten the fuel pump's longevity. This type of fuel pump damage is not warrantable.



FILLING THE TANK

CAUTION

Be especially careful when filling the fuel tank. **DO NOT** overfill the tank. Overfilling can damage the system's carbon filters and render the emissions control useless.

If fuel is spilled on stripes or decals, apply a common bath cleaner (nonabrasive) and wipe with a damp cloth. Rinse the spill area with clean water.

FUELING CONDITIONS

The following conditions may be considered normal operation of the fuel gauge and fuel system:

- Gas station pumps may shut off before the fuel gauge indicates **FULL**.
- The amount of fuel required for fill-up may not exactly correspond to the gauge.
- The gauge needle may not move away from **FULL** until some time after fill-up.
- The gauge needle may move during turns, stops, and acceleration.

NOTE: Become familiar with engine hourly fuel consumption at various speeds and know when to check the fuel gauge.

INSTRUMENT PANEL & CONTROLS

This section provides the information needed to understand and operate your Moomba.

The instrument system is composed of digital displays with graphical information to communicate status and performance information of the boat to the driver.

LEARNING YOUR DASH/ HELM

Intuitive navigation, sleek Moomba style and design offer one-touch access to media, wake, surf and lighting controls — all are at your command and on three advanced touchscreen displays throughout your Moomba dash.


This section provides the information needed to understand and operate your dash on all Moomba Boat Models. The instrument system is composed of digital displays with graphical information to communicate status and performance information of the boat to the driver.

For more information on the Hv700 Multi Function Display refer to the Dash Owners Manual.

MOOMBA DASH

Available on Craz, Makai, Mojo, Kaiyen

1. **PHONE CHARGER**
2. **WAKE PLATE CONTROL PADDLES**
3. **HORN**
4. **CRUISE CONTROL PADDLES**
5. **SURF SWITCH TOGGLE**
6. **GPSMAP INFOTAINMENT DISPLAY**
7. **TILT STEERING**
8. **IGNITION SWITCH**
9. **CHECK ENGINE LIGHT**
10. **HV700 MULTI FUNCTION DISPLAY**
11. **SWITCHES**

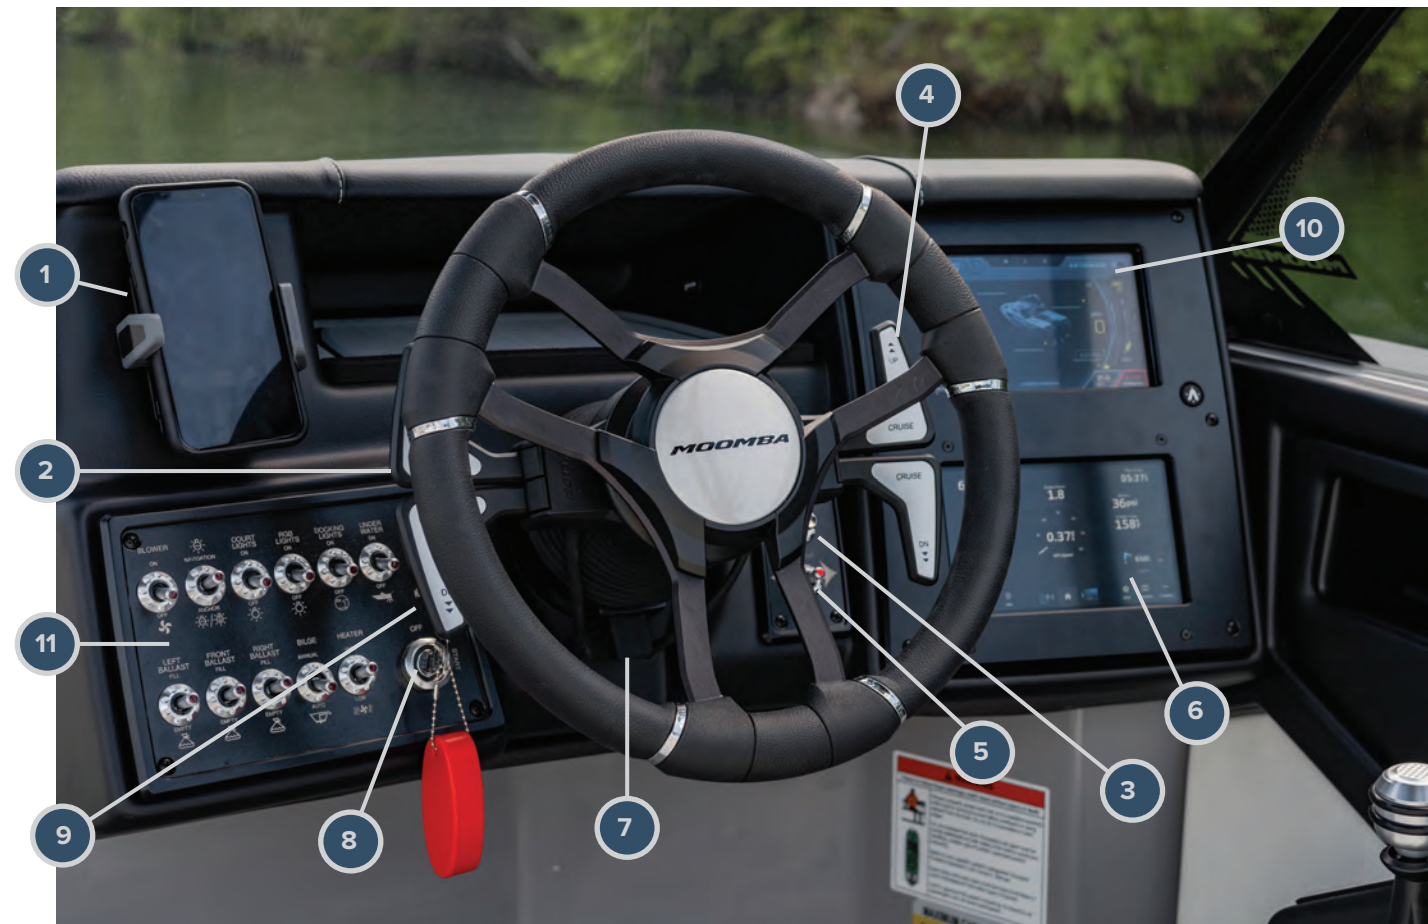




MOOMBA DASH
Available on Tykon, Max, Mondo

1. **PHONE CHARGER**
2. **WAKE PLATE CONTROL PADDLES**
3. **SWITCHES**
4. **CRUISE CONTROL PADDLES**
5. **IGNITION SWITCH**
6. **CHECK ENGINE LIGHT**
7. **TILT STEERING**
8. **HORN**
9. **SURF SWITCH TOGGLE**
10. **HV700 MULTI FUNCTION DISPLAY**
11. **AUDIO CONTROLS**

PANEL SWITCHES

* Standard on all Moomba's

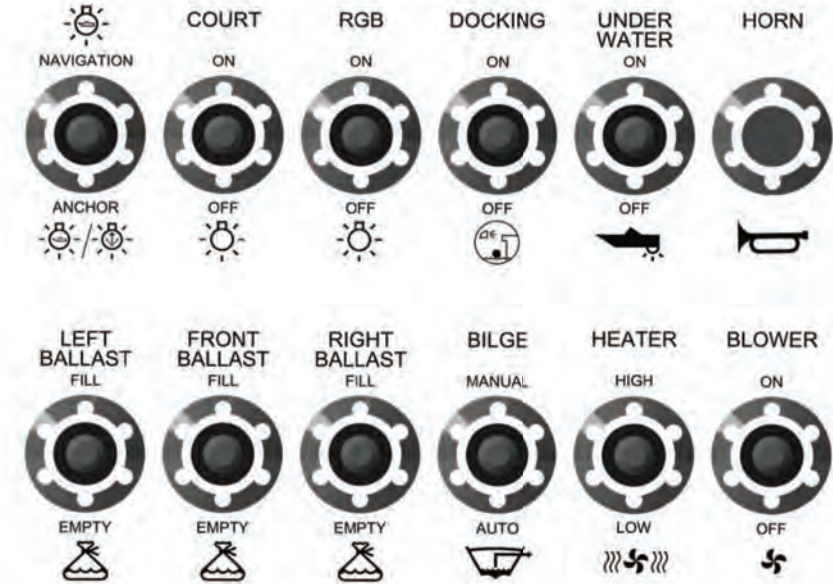

Switch configuration may vary slightly based on options. If you have any questions regarding operation, please contact your dealer.

NAVIGATION LIGHTS SWITCH

The Navigation Light switch supplies power to the Bow Light, the Stern Light and the Pole Light. Operation (Refer to Illustration to the Right):

When underway during night time operation, set the switch in the **NAV** position to activate all of the running lights. When docked or at anchor, set the switch, in the **ANC** position to activate only the pole light.

COURTESY LIGHT SWITCH

The Courtesy switch supplies power to the lighting throughout the boat.

DOCKING LIGHT SWITCH

The Docking Light switch supplies power to the docking lights. Switch must be turned on before lights will operate

THE BALLAST SWITCH

The ballast switch supplies power to the ballast pumps. This allows for manual filling and draining of the ballast system. The Ballast Pump cannot be filled with engine off.

ACCESSORY SWITCH (2 POSITIONS)

The Accessory switch supplies power to an extra circuit for accessories that may be added.

NOTICE: If any lights, bilge, stereo, Courtesy lights, or accessories fail to operate, press the appropriate circuit breaker located under the dash.

NAV



ANC



RGB LIGHT SWITCH

The RGB light switch supplies power to the RGB lighting throughout the boat. The controls for RGB lighting are found in the main screen on the dash.

BLOWER SWITCH

The blower switch activates the blower motor. The primary function of the blower fan is to remove any fumes from the bilge area. The blower also draws fresh air into the engine compartment. Never depend solely on the blower to eliminate dangerous fumes. Before starting the engine, always open the motor box to check if fumes are present. Switch on the blower fan a minimum of four minutes before starting the engine.

NOTICE: Refer to previous page for the location of the Blower Switch. If the blower fails to operate, contact your Moomba dealer.

⚠ DANGER

Failure to operate the blower in accordance with the Coast Guard Recommendation could result in an explosion.

THE HORN BUTTON

The Horn Switch is located on the starboard switch panel. Sound the horn by depressing the button.

One Long Blast: Warning Signal (Coming out of slip)

One Short Blast: Pass on my Port Side

Two Short Blasts: Pass on my Starboard Side

Three Short Blasts: Engines in Reverse

Four or More Blasts: Danger Signal



STARTING AND OPERATION


CENTER DRAIN PLUG

On V-drive models the center drain plug is accessed via the access cover in the center floor panel.

It is extremely important that the drain plug is always checked before starting the engine.

⚠️ WARNING

DO NOT start engine until center drain plug is checked and secured in place.

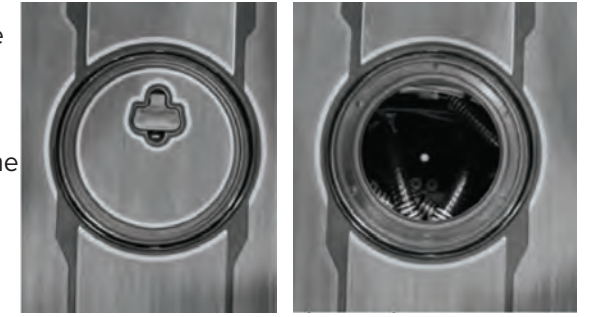

REAR DRAIN PLUG

The rear drain plug is located at the back of the boat, near the bottom of the transom (See photo). It is extremely important that the drain plug is always checked before starting the engine. The drain plug should be secured in place using a wrench.

⚠️ WARNING

DO NOT start the engine until the rear drain plug is checked and secured in place.

DO NOT try to install the drain plug while the engine is running.



A standard pre-starting procedure should be always be followed before the first start-up of the day.

1. Check the engine oil level.
2. Check for gasoline fumes in bilge or engine compartment.
3. Operate engine blower for 4 minutes before starting the engine to remove any fumes.
4. Check manual and automatic operation of bilge pumps. Make sure bilge areas are empty.

Other items might also be inspected, depending on the boat and its use. It is advisable to formulate a check list particular to the equipment and operation of your boat.

REFER TO THE BOATMAN'S CHECKLIST OF THIS MANUAL, LOCATED IN THE GLOVEBOX OF YOUR BOAT. Consult the local Coast Guard Auxiliary or Power Squadron for full details on boating safety.

NOTE: Add-on electrical accessories should never be connected to the ignition terminal or ignition circuit.

IMPORTANT: DO NOT continue to operate the starter for more than 15 seconds at a time without pausing to allow the starter motor to cool down for at least 2 minutes. This will also allow the battery to recover between starting attempts. PLEASE REFER TO ENGINE OWNER'S MANUAL FOR ADDITIONAL DETAILS.

⚠ DANGER

BEFORE STARTING ENGINE, BE SURE THAT THE SHIFT SELECTOR IS IN NEUTRAL. Please refer to the engine manual before starting.

⚠ DANGER

Do not start engine if gas fumes are present.


MOOMBA

BATTERY SWITCH

On most Moomba's the battery switch is located on the starboard side of the walkthrough to passenger seat area. The 2 positions available on the battery switch are: Off /On

If Equipped with E/Pex Tower- The main battery switch can be turned ON and OFF using the Remote Battery Switch that is located on the port side of the center section of the tower. When the switch button is depressed it will remain in that position, a light will come on, and the main battery switch will move to the ON position until the switch button is pressed a second time which will turn the main battery switch OFF and switch button light will no longer illuminate. It is recommended that the battery switch be in the OFF position when the boat is not in use.

NOTE: If the remote battery switch does not turn and tower switch does not light up, press the tower button again to turn off switch and check the remote battery solenoid to see if it's been moved to the "LOCK OFF" position (Remote Disabled) Refer to remote battery switch manual override located on the battery switch door for instructions.

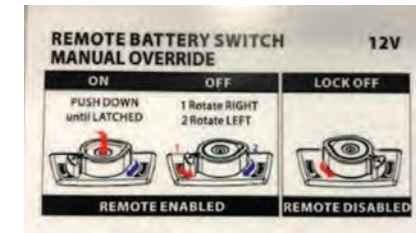

***E/PEX TOWER BATTERY SWITCH**



REMOTE BATTERY SOLENOID MANUAL OVERRIDE: This is used in case of tower switch not working.

STEP 1: Find the (RBS) located behind the battery door.

STEP 2: Manual switch will be the yellow part on top of solenoid. Push down on center of button until you hear a click.

STEP 3: When done for the day rotate yellow assembly right until you hear a click and center button pops up, this will shut off all power to the boat.

STEP 4: Rotate the yellow assembly back left so remote battery solenoid is in ready mode

IGNITION KEY

Located on the dash, the ignition switch has three positions. In the vertical position the ignition is “OFF”. One position clockwise is the “Run” position. This will power the dash Switches, screens and energize the motor. Full Clockwise is the “START” Position.

NOTE: All electrical equipment should be turned off when the boat is in storage.

Two Ignition keys are provided with the boat. Please, do not unduly force the key into the ignition. Key tumblers are located vertically, thus the key should be vertical when placed into the switch.

NOTE: Always attach the ignition key to a floating key chain to prevent loss in the water.

CHECK ENGINE LIGHT

Your boat has an amber check engine light. It functions much the same as the check engine light in your car. If the engine control module senses certain engine parameters out of range a trouble code is set, and the light will come on.

If the light does come on, stop using the boat and contact an authorized Indmar or Skier’s Choice Service Center.



SAFETY LANYARD/ENGINE SHUT OFF SWITCH

Your Moomba is equipped with a Safety Lanyard/Engine Shut Off switch.

In order for the engine to run, the plastic tip of the safety lanyard must be attached to the switch. If the clip is removed from the switch, the engine will not run.

Note: Extra Lanyard in Glovebox.



Avoid serious injury or death. Attach Safety Lanyard to driver prior to operating boat.



MIRRORS

A rear view mirror is installed as a standard item. The mirror is adjustable and is not permanently placed so that it may be set for each driver.

- Mirror should always be checked before driving.
- Mirror angle will change with each new driver.



TO START YOUR ENGINE

Before starting your engine connect the safety lanyard

1. Confirm the throttle lever is in the upright (neutral) position. (If throttle lever is not in the upright position (neutral), the throttle position sensor will not allow the engine computer to proceed with a normal starting procedure).
2. Turn ignition Key to START position to turn on your boat's engine
3. Allow the engine to establish a good idle (30 to 60 seconds) before getting underway.
4. Shift slowly into forward or reverse, allowing the transmission time to engage before powering up.

NOTE: It is normal for the idle to speed up in cold start conditions.

ENGINE WARM-UP

Always let engine warm up to normal operating temperature before accelerating.

THROTTLE LEVER

The throttle lever controls both the throttle and the transmission. The idle position (normally vertical) is the zero throttle position and the neutral position for the transmission. A safety ring (umbrella) keeps the lever from being accidentally moved to engage the transmission.

To place the transmission into gear, with your hand placed over the lever ball, pull up on the safety ring (umbrella) and slowly push the lever into forward gear or slowly pull the lever back into reverse gear.

TRANSMISSION LOCKOUT

The Transmission Lockout button allows the transmission to be disengaged while giving the throttle full operating range. With the lever in the idle position (normally vertical), push the button located at the bottom of the lever to disengage the transmission. The throttle may then be operated in any open position (forward of neutral or back of neutral upright position). Return the throttle to idle position, and the transmission lockout will automatically reengage the transmission in neutral position time to engage before accelerating the engine.

CAUTION

Never shift the lever directly from the neutral (vertical) position into a speed position.

- To prevent damage to the transmission, always allow the transmission time to engage before accelerating the engine.
- Once the transmission's engaged, you may accelerate as quickly as you like.



DAILY START-UP PROCEDURE

A standard pre-starting procedure should be always be followed before the first start-up of the day.

1. Check the engine oil level.
2. Check for gasoline fumes in bilge or engine compartment.
3. Operate engine blower for 4 minutes before starting the engine to remove any fumes.
4. Check manual and automatic operation of bilge pumps. Make sure bilge areas are empty.

Other items might also be inspected, depending on the boat and its use. It is advisable to formulate a check list particular to the equipment and operation of your boat.

REFER TO THE BOATMAN'S CHECKLIST OF THIS MANUAL, LOCATED IN THE GLOVEBOX OF YOUR BOAT.

Consult the local Coast Guard Auxiliary or Power Squadron for full details on boating safety.

NOTE: Add-on electrical accessories should never be connected to the ignition terminal or ignition circuit.

IMPORTANT: DO NOT continue to operate the starter for more than 15 seconds at a time without pausing to allow the starter motor to cool down for at least 2 minutes. This will also allow the battery to recover between starting attempts. PLEASE REFER TO ENGINE OWNER'S MANUAL FOR ADDITIONAL DETAILS.



BEFORE STARTING ENGINE, BE SURE THAT THE SHIFT SELECTOR IS IN NEUTRAL. Please refer to the engine manual before starting.



Do not start engine if gas fumes are present.

FUEL GAUGE

The fuel gauge is located on the main information screen. This gauge indicates the approximate quantity of fuel remaining in the tank when the ignition switch is in the "ON" position.

NOTE: DO NOT run the tank to empty. To prevent condensation from forming in the tank, it is recommended that the tank be filled when the gauge indicates 1/4 tank of fuel remaining.

SPEEDOMETER

The speedometer indicates the water speed of the boat in miles per hour.

NOTE: If the speedometer registers erratically, check speedometer pickup or GPS Puck.

TACHOMETER

The tachometer registers the operating speed of the motor's shaft output and may be used as an alternative to speedometer if weight and water conditions permit.

DO NOT exceed the recommended RPM during break-in and normal operation of your motor. Exceeding the manufacturer's suggested RPM may cause damage to the engine.

GPS PULSE BASED CRUISE SYSTEM

If Equipped, the GPS pulsed based cruise system uses a fast update antenna to display your true vessel speed. The antenna is located in the engine compartment and sends the signal directly to the engine control module to help with speed control.

GPS “ZERO OFF” CRUISE

If Equipped, the GPS “Zero Off” Cruise adds additional patented technology that enhances and even further improve the cruise control performance. The GPS puck is located on the deck of the boat and provides GPS signal to the dash for speed.

LOSS OF SPEED WARNING

In the case that the vessel loses the speedometer signal from GPS, a pop-up will come on the screen letting you know that the vessel has lost speed. Cruise will be disabled and the vessel might slightly lose speed. In that case, reduce speed and then manually control vessel speed with throttle lever.

SKI PYLON

The ski pylon is only to be used to pull skiers or tubers. DO NOT use the ski pylon to hoist the boat. Doing so will void warranty. Only use the lifting rings to hoist boat.


NOTE: With use the ski pylon may loosen. Should this occur, see your Moomba Dealer for service.

WARNING

The use of pylon extensions can severely effect the overall handling of the boat. Follow pylon extension manufacturer’s directions for mounting.

DO NOT mount any Pylon Extension on the rear pylon (located at the rear transom of boat).



 **WARNING**

- AVOID SERIOUS INJURY OR DEATH.
- TOW PYLON SHOULD BE USED ONLY FOR TOWABLE WATER SPORTS DEVICES.
- DO NOT USE TOW PYLON FOR OTHER TOWABLE OBJECTS OR TOWING BOATS.
- TOW PYLON IS NOT DESIGNED FOR VERTICAL EXTENSIONS. ANY MODIFICATIONS TO THE TOW PYLON OR ITS MOUNTINGS MAY RESULT IN DAMAGE TO THE BOAT AND INJURY TO THE USER.
- DO NOT SIT BEHIND THE TOW PYLON WHEN IN USE.

WL5HP0601



DRIVER SEAT OPERATION & ADJUSTMENTS

DRIVERS SEAT OPERATION & SEAT ADJUSTMENTS

RISE-R SEAT

The Rise-R Seat is a unique driver seat enhancement. The front edge of the driver's seat cushion lifts up to give the driver a taller sightline. To switch the seat to the raised position, use two hands to lift and push the front edge of the seat cushion up and back until it is sitting on the rear half of the driver's seat cushion. To switch to the lower position, use two hands to push the Rise-R seat cushion forward and down.

ADJUSTING SEAT HEIGHT

To adjust seat pedestal height, use lever under seat to raise or lower pedestal.

ADJUSTING SEAT FORWARD & AFT POSITION

The driver's seat may be adjusted forward or backward by moving the lever below the left of the seat. Use body pressure to move the seat to the desired position. Release the lever then check to feel the seat lock into place. The driver's seat will swivel and lock into position. The release lever is located below the left of the seat.

⚠ CAUTION

After adjusting the seat, be sure that it has locked into place by pushing forward and backward until it has securely latched.

⚠ CAUTION

DO NOT attempt to adjust the driver's seat while the boat is moving.

⚠ CAUTION

Be careful of the articulating hinge. Do not place fingers or other objects in the hinge mechanism during use.



SEAT SWIVEL

The driver's seat may be swiveled by lifting the cable release lever on the inboard side of the seat and using their body to rotate the seat.

⚠ CAUTION

Be careful of the articulating hinge, swivel mechanism,

TILT STEERING

Tilt steering may be adjusted up or down in five different locking positions. To adjust, depress the tilt lever located beneath the bezel and move the steering wheel to the desired position. Release the lever to lock the wheel into place.

STEERING WHEEL CONTROLS

Moomba's are equipped with steering wheel mounted controls.

CRUISE CONTROL SPEED PADDLES (BACK RIGHT OF STEERING WHEEL)

These paddles allow the speed of the boat to be increased or decreased while the cruise control is engaged.

WAKE PLATE CONTROL PADDLES (BACK LEFT OF STEERING WHEEL)

These paddles allow the Wake Plate position to be increased or decreased. The Wakeplate switch controls the position of the center trim tab (wakeplate). The Down Position raises the stern of the boat and lowers the bow.



BALLAST SYSTEM

The Ballast System in your boat is an electronically controlled ballast system that can be operated from the driver's seat. The system can be controlled by using the Moomba Dash. Be sure to read your Screen's Owners manual for how to use.

The Ballast System in your boat is an integrated and logically controlled system. The system is a series of reversible pumps with impellers used to pump water in and out of the ballast system bags and/or tanks through hoses, fittings and valves. The controller for the system automatically runs the pumps an appropriate amount of time to fill and to empty the bags.

BALLAST SYSTEM OPERATION

When AutoWake is ON, the ballast system will automatically fill and empty each of the 3 ballast locations based on desired Pitch, Roll, and max displacement settings in the Activity Presets.

When AutoWake is OFF, the system can be filled and emptied by pressing the UP(fill) or DOWN(empty) switches on the dash to begin filling each ballast location.

There are ballast sensors for the ballast vent hoses that will turn the pumps off short of the timer preset in the event water begins flowing out before the timers reach 100%. In the event there is no water detected in the ballast vent hoses when the timers reach 100%, it will automatically run the pumps for 1 extra minute. It is possible on the rear ballast bags the sensors might turn off the pumps before water flows out the vents. When this happens, a red dot will appear on the screen indicating the ballast is full. Do not overfill the ballast when red dot is on the screen, as this could damage the ballast system.

WARNING

When bags begin to vent, shut off!

CAUTION

Do Not overfill ballast bags!

The ballast system requires the engine to be running to fill but will empty when the engine is not running.

WARNING

Empty all ballast tanks completely before loading boat on a trailer or lift. Failure to empty ballast may cause serious damage to trailer, lift, or boat

BALLAST PUMP IMPELLERS

The pumps that fill and drain the ballast system use an impeller. Your Moomba ballast impeller uses the latest polymer technology in an effort to have the longest service life possible. The impellers are a wear item and different use patterns, water types, debris, etc. can greatly affect the service length of the impeller. As the impellers wear, the amount of water that is pumped into and out of the ballast system is reduced. Running the pumps without water will greatly accelerate the wear and prolonged running of the pumps without water will damage the impeller to the point that they will require immediate replacement.

Note: Impellers are a wear item and not covered by warranty.

MOOMBA BALLAST FILL TIMES

TIME IN MINUTES		
BOAT MODEL	FRONT BALLAST TIME	REAR BALLAST TIMES
MONDO	12:30	11:30
MONDO- G6	7:30	6:30
MAX	11:30	11:30
MAX- G6	6:30	6:30
TYKON	12:30	11:30
TYKON- G6	7:30	6:30
KAIYEN	7:30	6:30
CRAZ	7:30	6:30
MOJO	6:30	6:30
MAKAI	6:30	6:30



Ballast Trouble Shooting Guide

Problem	Possible Cause	Action	Correction
Pump will not turn on	Ballast power wires not connected to PDM.	Check ballast power wires PDM.	Connect power wires to battery PDM.
Pump will not turn on	Ballast breaker is tripped	Check 60 amp ballast breaker at the Engine Compartment.	Reset ballast breaker at battery
Pump will not turn on	System needs reset	Check power to all areas	Turn power off to the system at the breaker and then back on and retry
Pump turns on, but does not pump water	Pump not priming	(1) Water intake ball valves are not open (2) Kink in hose (3) Impellor Worn	(1) Open ball valves (2) Check hoses for kinks and straighten as needed (3) Check hose connections and tighten if loose. (4) Replace Impeller



EQUIPMENT AND OPTIONS

MOOMBA TOWER

Moomba models are equipped with a Moomba A3, Pro, or E/pex towing tower. The towers are designed with practicality, aesthetics, and the consumer in mind. The fold assist feature makes it easier to raise or lower the tower (two individuals working together is recommended).

The Moomba towing towers are NOT intended to be used to tow skiers, barefooters, tubes, or multiple wakeboarders. Such use will void any warranties written or implied.

Please review this section for details on its usage, maintenance and storage. Any use of the tower for towing anything other than those identified acceptable on the warning below will void any warranties written or implied.

MOOMBA MODELS ARE EQUIPPED WITH ONE OF THREE TOWERS: THE A3, PRO, OR E/PEX

A3 TOWER

The A3 tower features a weight assist system and cam latch that makes raising and lowering this forward folding tower a one person operation.

PRO TOWER

The Pro tower also features a weight assist system and cam latch, but also adds bridge and garage block fold stops, LED lighting, surf-side tow points and integrated hanging hooks on the bimini arms.








To fold the A3 and Pro, you rotate the cam latch to release the tower and lower the tower forward into the boat.

E-PEX TOWER


The E/Pex tower is a revolutionary design that delivers power-folding functionality with new innovative features for intuitive operation. The E/Pex tower includes integrated rack mounts, speaker mounts in the bimini, drying hooks, surf-side tow points, Moomba backlit logos and white courtesy lighting. The E/Pex bimini is innovative with its weight assisted easy folding hard top design, but also includes surf sleeves on top and a patent pending auto rolling bimini canvas system.




TO FOLD TOWER: Reverse steps to raise

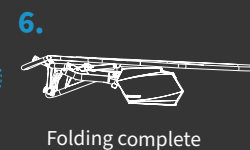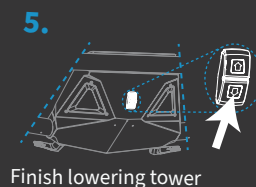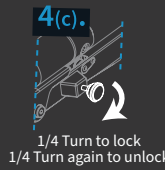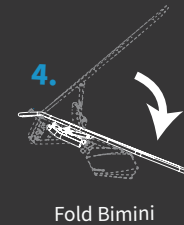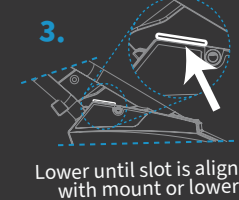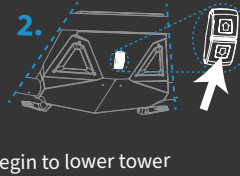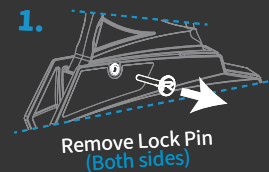

DANGER:
Lock Pin **MUST** be installed
before towing any riders or
water sport equipment

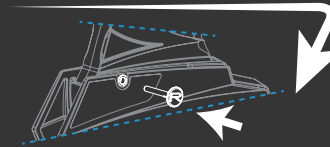

Instructions
Provided By:

 

A3 & PRO TOWER BIMINI SETUP & OPERATION

The optional tower bimini is a deployable sun shade that can be used when the boat is running or sitting still. To deploy bimini, first remove bimini boot. Next, remove pins from bimini arm and fold bimini frame out and secure to bimini arm with clips. Next, unroll bimini and attach bimini to tower using Velcro strips. You can adjust tension in the bimini by how tight you attach Velcro strips. To fold bimini back into storage position, reverse installation instructions.

NOTE: Bimini should be stored while trailering boat

⚠ WARNING

Be sure that all bolts are tightly in place before use.

⚠ WARNING

Be aware of and avoid low overhead objects such as bridges, powerlines, overhanging trees, etc.

E/PEX TOWER BIMINI SETUP & OPERATION

To raise the E/PEX tower: 1. Remove lock pins (both sides) 2. Begin to lower the tower using the buttons on the underside of the tower. 3. Lower until the slot is aligned with mount or lower. 4. Pull pins out of bimini arm to allow the bimini to fold. 5. Finish lowering tower

⚠ WARNING

Be sure to engage or remove tower pins before towing, as towing with the pins out will cause damage and is a danger to individuals who are riding behind tower.

WAKEBOARD RACKS

Board racks are a convenient way to store your wakeboards and/or surf boards while using your boat. If equipped, your Moomba has swivel board racks for easier loading and unloading of boards. The swivel arm has a stop at 0 and 180 degrees. To operate, pull up on the release pin handle and rotate the board rack. Lock the pin into position to ensure rack does not rotate unexpectedly.

⚠ CAUTION

- Lock wakeboard swing arm in the 0 degree out position prior to putting the boat in gear.
- Check tightness of all mounting hardware before each use.
- DO NOT trailer the boat with wakeboards mounted in the racks.
- Remove all boards from racks when trailering boat

SURF TOW POINTS

The surf tow points allow riders to get into position easily. Whether you are a new rider or expert, this takes out the work of getting to your side of the wake.



TOWER CAMERA

If equipped with the E/pex tower, your infotainment screen will seamlessly sync with your tower's camera offering the driver a view of the surroundings right on the helm display.

STERN SHADE

If equipped, the stern sun shade provides additional shade for the stern of the boat. To use, place poles in the sockets on the deck and affix the shade canvas to the tower bimini using the connectors. Secure the canvas to the top of the poles using the D-rings.



AUDIO

Enjoy full-range sound even when the boat's at full throttle.

TOWER SPEAKERS

If equipped, the tower speakers are an additional set of speakers designed to allow the rider to be able to hear the music. The tower speakers require the addition of an amplifier to power the speakers.

⚠ CAUTION

Some lakes have noise restriction ordinances. The use of tower speakers may not be allowed in your area. Please check all applicable laws in your area regarding noise level restrictions.

SUBWOOFER

If equipped, the subwoofer is designed to increase the sound level of the bass notes. The optional amplifier powers the subwoofer. The bass level can be adjusted on the amplifier. Please see stereo amplifier owner's manual for more information.

STEREO AMP

If equipped, The stereo amplifier is an piece of stereo equipment that is designed to increase the wattage of the signal going to the speakers while minimizing distortion of this signal. Please see stereo amplifier owner's manual for more information.

⚠ CAUTION

Using a stereo amplifier without the boat engine running may drain the battery to the point where the boat will not restart. This condition may happen very quickly, depending on the size of the battery!



Available only on models equipped with the Epex Tower



Available only on models equipped with the A3 or Pro Tower

STEREO REMOTE

Take command of your onboard entertainment with the integrated audio control unit, available in multiple locations on select Moomba's.

- Transom
- Passenger Dash*
- Drivers Dash*

* Available on Select Models



VERSATILE SEATING

With standard comfort and convenience features across the lineup, in your Moomba is a great place to spend time on the water.

WALK- THROUGH WINDSCREEN

Some Moomba models offer an optional Walk-Through windscreen. If equipped, the windscreen slides into the front walk-through to help prevent cold air from flowing into the cockpit area.



SUNDECK FLIP UP PADS

If Equipped, the sundeck Flip-up Pad creates an aft-facing backrest for lounging while the boat is not running. To raise the backrest, locate the quarter moon opening where the sundeck and rear seat back meet. Pull up sharply from the back of the sundeck, this will lift the backrest and at the same time push down and forward on the lower edge of the backrest.



* Rear Flip-up pads are **not** to be used while the boat is in motion or running.

CAUTION

- Verify the hinges are locked into place before using the seat.
- When lowering, locate the quarter moon opening near the bottom of the backrest and pull up to release the hinges.
- Be careful not get fingers or hands in the pinch points of the hinges.

SLIDING REAR FACING SEAT

The Sliding rear facing seat slides out to allow passengers to watch riders being towed. All Moomba models are equipped with a convertible sliding rear seat. The seat can be lifted and slid forward in the boat along the side rail system until the seat pins drop into slots in the slide rails and stop. If equipped, a seatback can be inserted for a more comfortable backrest .



CAUTION

The convertible rear seat back does not lock into place. It is not intended as support. Do not lean on or use as a brace in case of sudden change in direction.

TRANSOM

We did not over look the importance of a well designed transom. From our walk-through with GatorStep non-skid, to our well placed and functional storage compartments there is not once inch of unused or space. Along with our swim deck audio controls that allow you to stay in the water and still control your vibe, Moomba's transom proves to be one of the industry's most well designed.



1. POP UP PYLON
2. TRANSOM REMOTE*
3. BLOWER
4. SUN DECK FLIP UP PADS
5. SWIM PLATFORM

*** IF EQUIPPED**

POP UP PYLON

Completing the true meaning of versatility with our pop up pylon, you can participate in multiple activities from a low tow point location.

TRANSOM AUDIO REMOTE

An added feature of our updated transom remote allows for the rider to adjust the audio from the back of the boat.

SUNDECK FLIP UP PADS

If equipped, the SunDeck flip-up pads on the rear sundeck provide additional comfort on the back of your Moomba.

NOTE: Flip-up pads are not to be used while the boat is in motion or running.

EXTENDED BIMINI INSERTS

The optional stern shade is a removable sun shade that can be used when the boat is not running. To use shade, first insert support rods into receivers on the deck. Next, attach the stern shade to the tower using Velcro strips. Lastly attach the stern shade to support rods. You will have to slightly bend the rods to attach shade and this keeps tension on the cover. To remove, reverse installation instructions.

NOTE: Stern Shade/ Extended Bimini not to be used while the boat is in motion or running or while engine is on or while trailering boat.





1. PROPELLER
2. RUDDER
3. SURF PIPE
4. WAKE PLATE
5. THRUSTERS
6. UNDERWATER LIGHTS
7. TRANSOM REMOTE

SWIM PLATFORM

All Moomba models are equipped with a swim platform on the stern. The platform allows easy access to and from the water for boat passengers. It is recommended that all entries to and exits from the water be made from the platform to avoid accidents. (The fiberglass deck can become slippery when wet.) To exit the water, place both hands firmly on the platform, kick with both feet while pulling yourself up with both arms. As you exit the water, turn and sit on the platform.



The platform is attached to the boat with detachable brackets. The platform may be installed by:

1. Resting the platform top bracket pins in the hull-receiver bracket
2. Rotating platform to engage the lower pins
3. Pushing the clevis pins through both the platform bracket and hull bracket
4. Securing the clevis pin retainers. Reverse this procedure to remove the platform.

⚠ DANGER


Shut off the engine when people are on the platform or in the water near the platform.

⚠ DANGER

Exhaust fumes contain carbon monoxide. Direct or prolonged exposure to carbon monoxide will cause brain damage or death..

WAKE PLATE

The Wake Plate allows the driver to control the running attitude of the boat. It is integrated and logically controlled by the Moomba user control screen to automatically deploy and retract to preset positions based on boat speed and other parameters. It can also be controlled manually by paddles on the back side of the steering wheel.

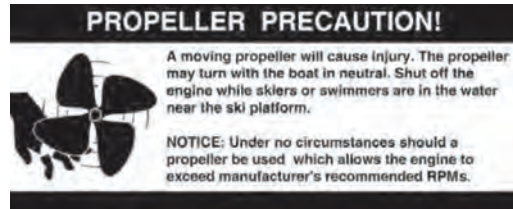

PROPELLER

It is strongly recommended that you consult with your Moomba dealer before changing the propeller to a different diameter or pitch than what was provided with the boat. In general, changing to a lower pitched propeller may increase acceleration, but will decrease top speed. Changing to a higher pitched propeller may achieve higher top speed with a light load, while acceleration and power may decrease.

⚠ DANGER

Avoid engine damage. Do not exceed the maximum RPM as listed for your motor. Some props may allow the engine to over rev, which can cause non-warrantable engine damage.



OPTIONAL UNDERWATER LIGHTS

⚠ CAUTION

Do not operate underwater lights out of water. It can cause the lights to overheat and lead to failure of light and damage boat. This damage is not covered by warranty

OPTIONAL DOCKING LIGHTS

The docking lights are designed to help you dock, load and unload your boat in low light or at night.

NOTE: Docking lights are not to be used as running lights at night. USCG regulations mandate that a boat under power after sunset must display a 360 degree white light and a red/green bow lights.

⚠ WARNING

It is illegal to wakeboard, ski, tube, etc., after sunset and before sunrise in most states. It has been outlawed because it is dangerous. Tower lights do not make these activities legal or safe.



DUAL STERN THRUSTERS

Moomba's patented Dual Stern Thrusters Throttle Knob Control gives you precise control from a simple twist of a knob. Designed for improved maneuverability while docking, trailering or picking up a rider, you'll have more control on the water than ever before.

DUAL STERN THRUSTERS

If equipped, this feature allows the driver to operate a set of dual thruster motors located on the stern of the boat.

They can be operated by rotating the knob of the shifter/throttle lever when the boat is at or below 5 MPH. Intuitively rotate the knob clockwise to spin the boat in a clockwise direction or counterclockwise to spin the boat in a counterclockwise direction. When the knob is released and allowed to spring back to center the motors will stop running. If the knob is held continuously for 30 seconds or more the motors will automatically reduce speed to a lower thrust conserving battery voltage.



OTHER OPTIONS

An array of features available for your Moomba boat, providing detailed information on their functionality, installation, and maintenance.

HEATERS

The boat heater is a forced air heater that uses hot engine water as a heat source. To use the heater, simply turn the heater switch to the selected fan speed. In order for the heater to work, the engine must be at operating temperature. One of the features of the heater are the snorkel vents, which can be pulled out to direct heat to specific areas. **NOTE:** Location may vary by model



SUNDECK FILLER CUSHION

If equipped, the removable piece can be inserted to provide a seamless sundeck pad if desired.



TRASH CAN ACCESS

Keep your interior clean with the help of a walk-through trash can

MOOMBA COVER

Our Moomba boat cover is made from the finest material and webbing to ensure that your boat will be protected in the off season. The cover has been designed to fit securely around each boat.

Use the following procedure when covering the boat:

1. Be sure that the cover fits snugly at the bow then unfold from front to back.
2. Be sure to install cover pole(s) and adjust to proper height. This will keep water from gathering in the center, which can damage the cover.
3. Use the ratchet system to tighten the drawstrap.
4. Loop the HangTyte system over the tower pylon and pull the rope tight if it's around tower type cover



FOLDING COVER

When folding the cover for storage, be sure the cover is dry. Take care not to scratch the canvas finish against rough surfaces. Store in a dry location.

COVER REPAIR

If the cover becomes damaged, immediately patch and reseal the area. Use a tent seam sealer to reseal any new stitches. Spray fabric guard on scraped or worn surfaces. Tears should be repaired professionally and stitches sealed to prevent leakage.


⚠ CAUTION

DO NOT trailer the boat with the mooring cover installed. This type of damage IS NOT covered by your boat warranty





SERVICE & MAINTENANCE

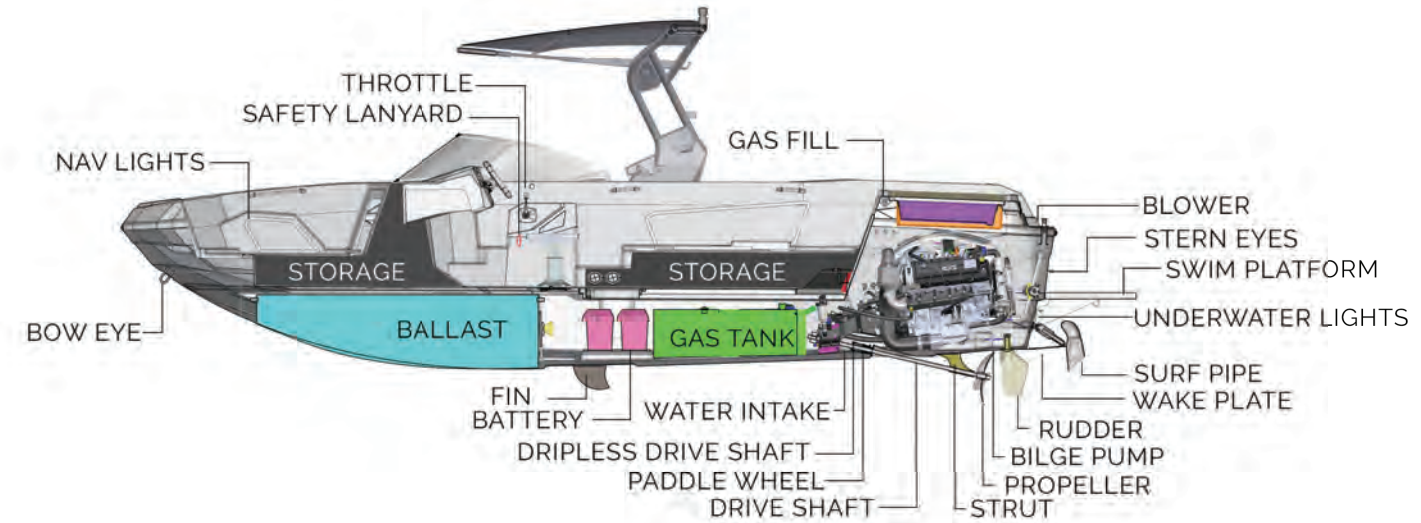

The illustration above denotes the areas which may need to be accessed or may require cleaning or maintenance. It is important to have a basic understanding of the parts and their locations on the boat. However, it is recommended that any service beyond routine maintenance be performed by an authorized Moomba dealer.

SERVICE & MAINTENANCE

For your convenience a maintenance chart has been included in this manual. The chart indicates when to perform safety checks, lubrication, and general service to the boat. Engine hours or elapsed time determine when service is necessary. It is recommended that any replacement parts used during maintenance or for repair be supplied by an authorized Moomba dealer.

NOTE: You are responsible for keeping records of all maintenance on your boat. To maintain your new boat warranty, you may be asked to show that required maintenance was performed. See maintenance log at the end of the manual.

MAINTENANCE SCHEDULE

For your convenience, a maintenance schedule has been included in this manual. The items listed outline when to perform safety checks, lubrication and general service to your boat. Engine hours or elapsed time determine when service is necessary.

It is recommended that any replacement parts used during maintenance or for repair be supplied by an authorized Moomba dealer.

NOTICE: You are responsible for keeping records of all maintenance on your boat. To maintain your new boat warranty, you may be required to prove that required maintenance was performed.

Maintenance Intervals @ Engine Hours

Maintenance To Perform	Weekly	1st 25	50	100	Yearly
Check Fuel Lines & Connections for Leaks	X	X	X	X	X
Ballast - Impeller Replacement				X	X
Check Battery Electrolyte Level		X	X	X	X
Check All Electrical Connections	X			X	X
Check Cooling System Hoses for Leaks	X	X			X
Tighten Engine Mount Fasteners					X
Lubricate Shift Linkage Pivot Points					X
Check for Loose, Damaged or Missing Parts	X	X			X
Check Engine To Prop Shaft Alignment		X		X	X

* If engine overheats, visually check. If clogged, remove debris.

This inspection and maintenance schedule is recommended for average operating conditions in normal service. Under severe operating conditions or service, intervals should be shortened.

NOTE:

REFER TO INDMAR ENGINE MANUAL FOR ENGINE, TRANSMISSION AND V-DRIVE MAINTENANCE SCHEDULE AND PROCEDURES.

NOTE: See page 180 for Maintenance Log to keep track of all your records.

DRIPLESS SHAFT SEAL

Your Moomba comes standard with a dripless shaft seal. If any seepage occurs, contact your dealer.

COMPONENT LUBRICATION

Normal use of your Moomba causes metal to metal movement at some parts in the boat. These moving parts should be lubricated with a water resistant chassis lubricant such as silicon grease.



WATER STRAINER

The engine water strainer is a filter for the engine cooling water. It consists of a stainless steel mesh filter inside a clear cup. It is located between the water intake on the bottom of the boat and the engine's raw water pump. It should be checked periodically for debris as conditions dictate. To remove debris, unscrew the clear sight cup, remove the o-ring and stainless steel mesh filter and proceed to rinse out the cup. Be sure to reinstall the mesh filter and o-ring before reattaching the sight cup to the inlet.



Fresh Water Flush

The Fresh Water Flush port on the water strainer is a valve specifically designed to allow you to attach a garden hose to your engine water intake to flush brackish or salt water out of your engine. To use the Fresh Water Flush, simply attach a garden hose to the valve. Turn on the water to the valve. Start the engine. Monitor the exhaust port on the transom of your boat and engine temperature gauge. Water should come out of the exhaust port while the engine is running. It is recommended that you run the engine at a low RPM while flushing, since the engine's raw water pump at higher RPMs can pump more water than the garden hose can supply. If you have questions on the operation of your Fresh Water Flush port, consult your Moomba Dealer.

BATTERY

Your battery is an important part of your boat. It provides all the power to start your boat and allows all of your electrical components (bilge pump, blower, stereo, etc.) to work even if the motor is not running.

BATTERY BOX

The batteries are mounted under the port side cushions. Location may vary slightly depending on the model.

NOTICE: It is recommended that the battery cables be disconnected from the battery when the boat is placed in storage.

CAUTION

Avoid damage or injury from battery acid. Ensure that the battery is properly secured before using boat.

CAUTION

Failure to connect battery cables as outlined will damage the system and void the warranty.

WARNING



Sulfuric acid in the battery can cause serious burns. If spilled on skin or in eyes, flush with clean water immediately, then seek medical attention.

WARNING

Hydrogen and oxygen gases are produced during normal battery operation and charging. Sparks or flames near the battery vent openings can cause the mixture to ignite and explode.



BATTERY CABLE- INSTALLATION & PRECAUTIONS

Your battery is an important part of your boat. It provides all of the power to start your boat, and also allows all of your electrical components to work, even if the motor is not running (bilge pump, blower, stereo, etc.)

Your Moomba electrical system is a negative ground type. The negative battery cable is grounded to the engine block. The positive battery cable is connected to the starter solenoid.

Deep Cycle/Gel Cell/Leisure/Lithium Ion batteries are not recommended for engine starting.

Lithium Ion batteries are not compatible with current engine charging technologies and MUST NOT be used. Use of Lithium Ion batteries will compromise the Indmar Limited Warranty and may result in a dangerous electrical system malfunction

BATTERY SPECIFICATIONS

*12 Volt Marine Type Battery
with tapered post connectors
Engine Size 6.2L
Cold Crank @ 0°O F (-18°O C)
Minimum of 800 Amps*



Do not turn the selector switch to the “Off” position when the motor is running. The alternator will be permanently damaged and is not covered under Skier’s Choice or Indmar warranty

CAUTION

NOTE: The battery selector switch should be turned to the Off position when the boat is not in use. Some components do not shut completely off and will drain the batteries if left on for a period of time depending on the condition of the batteries.

NOTE: It is recommended that you fully recharge your batteries using a battery charger periodically or after a period of high discharge (running many accessories for an extended period of time).

NOTE: Skier’s Choice highly recommends using quality “Dual Purpose” batteries.



CLEANING, CARE & STORAGE

CLEANING & CARE

We understand that maintaining your boat's pristine condition is essential for optimal performance and longevity. This section will provide you with valuable insights and guidelines on how to properly clean, care for, and store your boat, ensuring it remains in top-notch shape for countless adventures on the water. By following these recommendations, you'll not only enhance your boat's appearance but also safeguard its components, allowing you to enjoy your Moomba for years to come.

FIBERGLASS CARE

Washing and waxing the boat hull and deck regularly will extend the life and beauty of your Moomba. It is a good routine to rinse your boat with fresh water after each day's use.

It is recommended that the hull and deck be cleaned and waxed after every 25 hours of use. This will decrease water friction and lesson the potential for staining or spotting on the gelcoat surface.

When the original gelcoat shine cannot be restored by waxing, the shine may be restored by hand buffing with a commercial polishing compound. Be sure to apply a new coat of wax containing Carnuba over the area that has been polished.

IMPORTANT: Porcelain cleaning powders are too abrasive for use on gelcoat and may cause permanent discoloration if used. Household detergents containing ammonia or chlorine should not be used on gelcoat. Never use acetone or ketone solvents to clean your boat finish.

WASHING YOUR BOAT

The easiest way to preserve the beauty of your boat is to keep it clean by frequent washing. Wash the boat with luke warm or cold water. Wipe the boat down immediately after washing to avoid water spots. Avoid using hot water or washing your boat in direct sunlight. Avoid using strong soaps or chemical detergents. To avoid spotting, all cleaning agents should be thoroughly rinsed from the surface promptly and not allowed to dry on the finish.

RUB RAIL CARE

Use a sponge or other soft material to wash and wax the rub rail. To wax, use a commercial automotive bumper wax.

NOTICE: When tying up to a dock or another boat, always use cushioned fenders (dock bumpers) to protect your boat from hard surfaces.

WINDSHIELD CARE

Clean the windshield regularly to ensure that visibility is not obstructed. Use a commercial glass cleaner to remove any spotting or stubborn stains that develop on the windshield. Never use abrasive cleaners on glass or plastic surfaces as they may cause scratches.

FOREIGN DEPOSITS

Tree sap, bird droppings, airborne chemicals, petroleum products and other foreign matter may damage the gelcoat surface if not removed promptly (See Washing Instructions).

BOAT HULL PROTECTION

If your Moomba is to remain in the water for an extended period, the hull below the water line should be painted with a marine bottom paint. Boats left in the water for extended periods of time without bottom paint may experience blistering or discolorization. This type of damage is not covered by your boat's warranty.

⚠ CAUTION

Damage caused by improper care, cleaning agents, conditioner oils, waxes, gasoline, etc., IS NOT covered under our boat's warranty. Use only the recommended vinyl cleaner as listed on the Vinyl Care Instruction Sheet.

WET SLIPPING BOATS

⚠ CAUTION

- In the event of large storms, boats in wet slips are more likely to be damaged.
- If you do not use the boat often, the battery can go dead from pumping out water.
- The boat may develop organic growth which can greatly reduce performance, attack and discolor the gelcoat.*
- The boat may develop osmotic blisters.*
- The boat may get a stain line which cannot be removed.*

** Painting the area below the waterline of the boat with Interlux or Pettit products will reduce the likelihood of these last three.*

UPHOLSTERY CARE

All upholstery items on your Moomba are made of tough marine grade vinyl that is easily cleaned. It is important to provide for the drying of all upholstery and flooring after each use of the boat. Open all storage compartments and slide all removable.

Improper drying of your cushions can attract mold spores under the vinyl which develop pink or blue stains depending on the type of mold. These stains are not covered under the limited warranty. If the cushions are wet, turn them up at an angle as shown above to promote drying.

The best cleaner is mild soap and water followed by rinsing with fresh clean water.

To clean your Thermoskinz vinyl, wipe down with dawn dish soap and water mixture. DO NOT USE chemicals on Thermoskinz/Chill Tech

⚠ CAUTION

Strong detergents and cleaners may shorten the life of the vinyl. PLEASE SEE VINYL MANUFACTURER'S RECOMMENDED CARE GUIDE INCLUDED IN YOUR OWNER'S MANUAL PACKAGE. FAILURE TO FOLLOW CARE GUIDE MAY VOID VINYL WARRANTY.



Chil™ Cool Technology Upholstery Cleaning & Care
Mix a solution 30:1, (30 parts warm water and 1 part mild non-bleach liquid dish soap). Apply and rub with a soft damp cloth. Rinse with clean warm water and wipe dry.

“USE ONLY SOAP AND WATER”

DO NOT use these or similar cleaners: 409®, 303®, Babe's®, Boat Bling®, Star brite®, Meguiar's®, or Fantastic®. They will damage the vinyl's surface & cooling properties! Failure to care for your vinyl properly or use of improper cleaners will void your warranty and damage your vinyl!

SPRADLING USA
Marine and RV Division

Chil™
COOL TECHNOLOGY

WEATHERIZATION & DRY STORAGE

When the boating and Watersports season comes to a close or begins, it is important to have your boat professionally winterized or summerized.

WINTERIZATION

When the boating season comes to a close, it is important to have your boat winterized by a service professional or your local Moomba Dealer.

If your boat is exposed to temperatures below 32 degrees F (0 degrees C), it is possible for water in the engine, ballast system, etc., to freeze. As this water freezes, it expands and can crack pumps, valves, heat exchangers, engine blocks, etc. This type of damage usually requires the replacement of the cracked item and can be very expensive to repair.

CAUTION

It is extremely important to follow the proper winterizing procedure. The engine must be correctly winterized for safe storage in your climate. This should be done by a professional. Your Moomba dealer will know exactly what must be done to ensure the longest possible life for your boat.

NOTE: During the winter months, water is a boat's worst enemy. Always store the boat when the interior is completely dry. Periodically check on the condition of the stored boat.

CAUTION

Damage due to improper winterization IS NOT covered under your boat's warranty.

CAUTION

E-10 fuels require fuel stabilizers that are specifically designed for E-10 fuels to help prevent moisture absorption, phase separation and gasoline stabilization.

WINTERIZATION CONTINUED:

In addition to having your boat professionally winterized, the following tasks should be done to protect your boat during storage:

1. Remove the drain plugs from the boat.
2. Thoroughly clean the boat inside and out. Inspect the hull for any residue or algae growth and remove if required.
3. Clean the bilge area thoroughly and operate the bilge pump to remove any water from the bilge hose.
4. Replace cushions and open all storage areas to air circulation in the boat interior. When thoroughly dry, replace cushions and close storage areas.
5. Top off fuel tank to prevent any condensation from accumulating in the fuel system. Use a commercially available fuel stabilizer to remove water and prevent gumming.
6. If the boat is stored on its trailer, ensure that the boat is properly positioned. If possible, lift the tongue so that the bow is slightly raised to promote drainage from the drain hole.

Install the canvas cover and secure the straps in accordance with cover instructions.

NOTE: It is recommended that the battery cables be disconnected from the battery when the boat is placed in storage.

SUMMERIZATION

Before using the boat after it has been in dry storage requires some special treatment. Moomba recommends having your boat professionally summerized, preferably by the same facility that prepped it for storage. They will be familiar with what items were done in the fall and what items need to be addressed in the spring. In addition to having your boat professionally summerized, the following list of tasks should be done to ensure a successful start to your boating season.

When launching the boat for the first time of the season, carefully watch all gauges to ensure that the boat is not overheating, the alternator is charging and the engine has proper oil pressure.

NOTE: It is recommended that the battery cables be disconnected from the battery when the boat is placed in storage. (Refer to Battery Cable Installation and Precautions)

- Check Trailer
- Tire Pressure
- Lights

- Charge Battery
- Clean & Wax Gel Coat
- Clean Interior

- Check All Systems
- Blower
- Bilge Pump
- Navigation Lights
- Interior Lights

TEMPORARY HOISTING

If the boat ever needs to be hoisted, special attention should be given to the following recommendations:

- Hoist the boat using a horizontal lifting bar only.
- Never attempt to lift the boat by means of a cable sling from bow to stern lifting eyes.
- Hoist operator should slowly and smoothly lift the boat without jerking to avoid damage to the lifting eyes.

⚠️ WARNING


DO NOT USE ski Pylon to hoist boat.

⚠️ CAUTION

Incorrect hoisting may invalidate the warranty on the boat

⚠️ WARNING

Use only a proper sized sling in the designated lifting rings to hoist the boat.

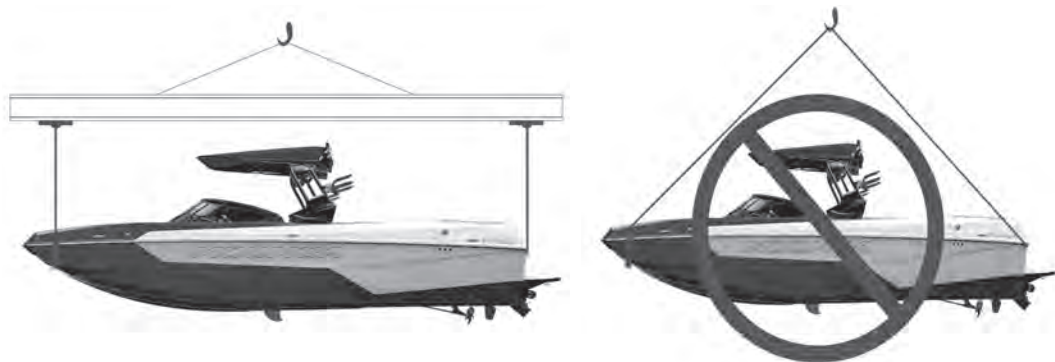

NOTE: For boat houses, we highly recommend the use of a lifting cradle. Cradle bunk design should mimic the bunk design of the trailer.

HULL IDENTIFICATION NUMBER

The hull identification number is located on the upper right hand side of the transom below the rub rail.



BOW EYE

The bow eye is located at the front of the hull below the rub rail. It is the point of attachment to lead the boat onto the trailer and to secure the boat to the trailer or to a tie-off when docking.

⚠️ WARNING

NOTE: See Hoisting Instructions before using bow eye to hoist the boat.

DO NOT use the bow eye ONLY to hoist the boat. You must use a sling with the bow eye when hoisting the boat. Use only the designated lifting rings to hoist the boat. (See Hoisting Instructions.) Incorrect hoisting may invalidate the warranty on the boat

LIFTING RINGS

Two lifting rings are located on the transom.

NOTE: The lifting rings should be the only point of attachment for lifting cables. (See Hoisting Instructions.)

POP-UP CLEATS

To use the cleat, pull the center up.

⚠️ WARNING

DO NOT tow objects with the cleats.



TECHNICAL INFORMATION

DASH POWER DISTRIBUTION MODULES (PDM)

The power to the dash circuit is protected by a circuit breaker that is located in the observer seat storage area near the battery.

To turn off the power to the dash, manually press the red button and the circuit breaker reset lever will flip down and the power to the dash circuit will be shut off. To reset the breaker, push the reset lever back up.

If all of the dash switches fail to work, reset the main dash power-circuit breaker.

AUTOMATIC BILGE PUMP FUSE-OBSERVER'S STORAGE



FUSE PANEL- TOP OF ENGINE



MAIN DASH POWER-CIRCUIT BREAKER



2024 MOOMBA FUSES/BREAKERS (MONDO, TYKON, MAX)

Fuse Block	Engine			Top of Engine
	ECM	ATM	10	
	Fuel Pump	ATM	20	
	Fuel Pump 2	ATM	20	
	Helm	ATM	20	
	Ignition	ATM	10	
	Main	ATM	40	
	PTR	ATM	30	
	Starter	ATM	20	
	Fuel Pump Relay	Relay	N/A	
	Power Relay	Relay	N/A	
	Starter Relay	Relay	N/A	
	Heater Recirculation Pump	ATO	7.5	
	Buss Bar			
Buss Bar Engine	ANL	250		
	2nd Buss Bar	ANL	250	

Breaker Panel 12 Position	Breaker Panel			Behind STBD Bow Back
	Ignition	Breaker	10	
	Bilge	Breaker	5	
	Blower	Breaker	4	
	Spare	Breaker	10	
	Nav/Anc	Breaker	5	
	Court/RGB	Breaker	5	
	Docking	Breaker	10	
	Underwater	Breaker	3	
	Stereo	Breaker	15	
	Horn/Ballast	Breaker	4	
	12 volt	Breaker	15	
	Heater	Breaker	15	

Inline Fuse	GPS/INCL	ATO	3	Screen Pigtail
	Forward Bilge Pump	ATO	5	Battery Switch
	Transom Bilge Pump	ATO	5	
Power Board	Power Board			Observer Seat Storage
	Main Buss Bar	ANL	150	
	Main Dash	Breaker	50	
	Amplifier Harness	AMI / MIDI	80	
	SYN-DX4 Amplifier	ATO	30 x2	
	SYN-DX6 Amplifier	ATO	30 x3	
PDM	Forward Engine Area			Fwd Engine Area
	Rear PDM 1	Breaker	60	
	Rear PDM 2 (Optional)	Breaker	60	

2024 MOOMBA FUSES/BREAKERS (CRAZ, MOJO, KAIYEN, MAKAI)


Fuse Block	Engine			Top of Engine
	ECM	ATM	10	
	Fuel Pump	ATM	20	
	Fuel Pump 2	ATM	20	
	Helm	ATM	20	
	Ignition	ATM	10	
	Main	ATM	40	
	PTR	ATM	30	
	Starter	ATM	20	
	Fuel Pump Relay	Relay	N/A	
	Power Relay	Relay	N/A	
	Starter Relay	Relay	N/A	
	Heater Recirculation Pump	ATO	7.5	
Buss Bar			Under Transmission Cover	
Buss Bar Engine	ANL	250		
2nd Buss Bar	ANL	250		

Breaker Panel 12 Position	Breaker Panel 12 Position			Behind STBD Bow Back
	Spare	Breaker	5	
	Ignition	Breaker	10	
	Stero	Breaker	15	
	12V	Breaker	15	
	Wireless Charger	Breaker	15	
	Seat Up/Down	Breaker	15	
	Spare	Breaker	5	
	Blower	Breaker	4	
	Horn/Ballast	Breaker	4	
	Camera/NEMA	Breaker	3	
	Heater	Breaker	15	
Thrustors	Breaker	5		
Breaker Panel 6 Position	Breaker Panel 6 Position			
	Docking Lights	Breaker	10	
	Court Lights	Breaker	5	
	Underwater Lights	Breaker	3	
	Nav/Anchor Lights	Breaker	5	
	Spare	Breaker		
Spare	Breaker			

Inline Fuse	GPS/INCL	ATO	3	Screen Pigtail
	Foward Bilge Pump	ATO	5	Battery Switch
	Transom Bilge Pump	ATO	5	
Power Board	Power Board			Observer Seat Storage
	Main Buss Bar	ANL	150	
	Optional (Mojo, Makai Thrusters)	ANL	250	
	Main Dash	Breaker	50	
	Amplifier Harness	AMI / MIDI	80	
	SYN-DX4 Amplifier	ATO	30 x2	
	SYN-DX6 Amplifier	ATO	30 x3	
	Amplifier Power	AMI / MIDI	80	
EPEX Tower Main	Breaker	30		
Forward Engine Area	Forward Engine Area			Fwd Engine Area
	PDM	Rear PDM 1	Breaker 60	
		Rear PDM 2 (Optional)	Breaker 60	
	Thrustors	Port Side Thruster (Optional Makai, Mojo)	Breaker 120	
STBD Side Thruster (Optional Makai, Mojo)		Breaker 120		

V- Drive Engine Compartment

To access the engine compartment, raise the side sundecks and pull up to open the engine hatch cover.

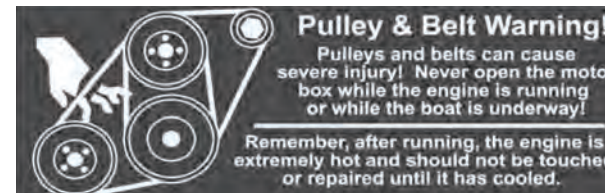

Fire Extinguisher

A standard Marine Fire Extinguisher is provided with your Moomba boat. The fire extinguisher is usually located on the port side under the observer's seat cushion, however, locations vary by boat. You should know the exact location of your boat's fire extinguisher in case of an emergency.

NOTICE: Refer to the instructions on the fire extinguisher for proper use.

Automatic Fire Suppression System

The optional Automatic Fire Suppression System has a sensor in the engine compartment that is designed to detect a fire. Under normal conditions, the dash area warning light will glow green when the ignition is "ON". If the engine compartment sensor is activated by a fire, it will deploy the content of its fire extinguisher and the dash mounted warning light will turn red.

TRAILERING PROCEDURES



TRAILERING YOUR MOOMBA

Properly understanding the techniques involved with trailering your boat will not only protect your boat during transportation, but also ensure a smooth transition from trailer to water, allowing you to enjoy your boat with peace of mind.

NOTE: Be sure to read the **ENTIRE** towing section of your vehicle owner's Manual as well as entire Trailer Owner's Manual before towing your trailer or trailered boat and for maintenance schedule

TRAILER & TOWING

The trailer supplied with your Moomba was designed especially for the boat with your convenience in mind. Please be sure that you have an appropriate tow vehicle before attempting to trailer your boat. Your vehicle must be fitted with appropriate trailer hitch and capable of towing the maximum weight or your specific Moomba model's boat, trailer, fuel and gear. Your Vehicle must be capable of towing 4,500-- 6,000 lbs depending on the mode (see specs section for more details).

All Moomba trailers require a 2 5/16" ball and seven (7) pin round marine grade trailer wiring connector. The standard height from the ground to the top of the hitch ball should be about 22 inches. With the trailer attached to the tow vehicle, the trailer should stand approximately level.

PROLONG TRAILER LIFE

The following guidelines will prolong the life of the boat and trailer:

1. Always secure the boat to the trailer with tie-downs. Do not place straps around fenders or lights.
2. Always verify that the winch hook is securely in the bow eye, the strap is tight and the winch handle locked in place before trailering. Be sure to attach the additional safety strap to bow eye.
3. Check the recommended pressure displayed on the side of the tires and assure that it is maintained. Under-inflated tires could cause trailer sway and excessive tire wear.
4. Before use, please read all information supplied with the trailer by the manufacturer (Bearing Buddy and hydraulic brake actuator) Check wheel bearing grease.
5. See Trailer Owner's Manual for Maintenance Schedule.



CAUTION

Inadvertent release of latch pin could result in injury.



CONNECTING YOUR TRAILER

When connecting the trailer to your tow vehicle, use the following procedure:

1. Raise the tongue with the trailer jack. Position the trailer coupler directly over the tow vehicle ball, and lower the jack until the coupler goes all the way down over the ball.
2. Ensure that the coupler latch top is flush with the coupler and has closed over the ball. If it does not automatically close, press down on it until it closes.
3. Insert the locking pin into the coupler. Lock pin hole is on the side of the coupler.
4. When all weight is off the trailer jack, pull the jack lock pin and rotate the jack to the horizontal position and re-lock the pin.
5. Attach the safety cables to the tow vehicle hitch. Cross the cables and wrap them around each other once or possibly twice allowing just enough slack to permit tight turns of the vehicle and trailer.
6. Plug the trailer lights connector to the vehicle harness.
7. Clip the brake lockout cable to the vehicle hitch.

NOTICE: If your hitch ball has an excessive flat spot on top, the latch may not engage properly. If the latch does not catch, check with your dealer or hitch installer before trailering.

TRAILER PLUG WIRE SCHEMATIC

White: Ground

Green: Right Turn/Brake

Yellow: Left Turn/Brake

Brown: Running Lights

Blue: Reverse Lights



TRAILER ALIGNMENT

CORRECT TRAILER ALIGNMENT



When pulling the boat onto the trailer, be sure that it is centered on the trailer.

INCORRECT TRAILER ALIGNMENT



The distance between the boat and the wheel run-ner board should be equal on both sides.

UNLOADING PROCEDURE

To unload the boat, use the following procedure as a guide:

1. Make sure that all drain plugs are securely in place.
2. With Bow Eye Hook fastened, back the trailer until the water level is approximately 1 inch below the top of the trailer fenders.

NOTICE: Ramp slopes vary, so actual level of water on trailer may be different.

3. Follow the cold start procedure recommended in this manual.
4. After starting the engine, remove Bow Eye Hook.
5. With engine idling, center steering wheel, engage transmission and slowly pull throttle into reverse. Ease back on the throttle lever until the boat starts to move.



NOTE: DO NOT attempt to use excessive power to free the boat from dry carpet runners. Power off of the trailer only when the boat has floated free.

CAUTION

If the trailer is not submerged to the correct depth, the bow of the boat could drop when powering off incorrectly, possibly damaging the boat.

CAUTION

Roll all windows of tow vehicle down prior to backing down ramp. Should the vehicle slip into the water, the driver can escape through an open window.

NOTE: Because your Moomba is a true inboard, when backing up, the stern will have a tendency to drift due to prop rotation. Once the boat reaches control speed the rudder will self correct.

LOADING PROCEDURE

To load the boat on the trailer, position the trailer in the water with approximately 1 inch of the top of the fender showing.

1. Idle/coast the boat onto the trailer using as little power as possible, while keeping it centered between the guide poles.
2. Power slowly forward until the bow eye roller contacts. If it will not reach the roller with low power, position the trailer slightly deeper in the water.
3. Winch hook must be attached to bow eye and tightened before trailering.
4. Secure the safety strap to the bow eye once the winch hook is tightened.
5. Double check that all ballast tanks are empty before pulling out of the water.

DO NOT Power onto the trailer during rough conditions! Once correctly positioned on the trailer, switch off ignition.

DO NOT OVER-POWER onto trailer or damage may occur to the boat and/or the trailer!.

CAUTION

The trailer must be positioned for the correct water depth for loading or you may damage the boat. Varying ramp angles require different procedures. In general, the steeper the ramp, the more shallow the trailer should be positioned in the water. Your local dealer can help you understand this, should you require additional assistance.



SKIER'S CHOICE 2024 MOOMBA BOAT LIMITED WARRANTY

Skier's Choice, Inc. ("Skier's Choice") provides the following manufacturer's limited warranty, subject to the remedies, conditions, exclusions, and limitations set forth below, on all Moomba® brand water sports boats sold as new by our authorized dealers. ("Covered Boats"). Indmar Marine Engines provides a manufacturer's limited warranty (the "Engine Warranty") for the engine of each Covered Boat. Boatmate Trailers provides a manufacturer's limited warranty (the "Trailer Warranty") for the trailer sold by our authorized dealers with each Covered Boat. For specific information on the Engine Warranty and the Trailer Warranty, please refer to the individual Indmar and Boatmate limited warranty policies. Exclusions and limitations apply.

DISCLAIMER AND LIMITATION OF IMPLIED WARRANTIES

ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS OR IMPLIED, ARE SUPERSEDED BY THIS LIMITED WARRANTY. AND, SKIER'S CHOICE DISCLAIMS, AND THE OWNER HEREBY EXPRESSLY WAIVES, TO THE MAXIMUM EXTENT ALLOWED BY APPLICABLE LAW, ANY AND ALL OTHER WARRANTIES, CONDITIONS OR REPRESENTATIONS OF ANY KIND, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE WARRANTIES WHICH ARE IMPLIED BY, AND CANNOT BE EXCLUDED, RESTRICTED, OR MODIFIED UNDER APPLICABLE LAW. THE TERM OF ANY IMPLIED WARRANTIES THAT CANNOT BE DISCLAIMED UNDER APPLICABLE LAW, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PERIODS STATED HEREIN. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES AND/OR DO NOT ALLOW LIMITATIONS ON THE AMOUNT OF TIME AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. HOWEVER, IN THE EVENT THAT APPLICABLE STATE OR COUNTRY LAW DOES NOT ALLOW EXCLUSION OF IMPLIED WARRANTIES BUT SETS FORTH THAT IMPLIED WARRANTIES MAY BE LIMITED IN DURATION, THIS LIMITED WARRANTY LIMITS THE DURATION OF IMPLIED WARRANTIES TO THE TIME PERIOD PROVIDED IN THIS LIMITED WARRANTY OR APPLICABLE STATE LAW, WHICHEVER IS SHORTER. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR COUNTRY TO COUNTRY. THIS LIMITED WARRANTY DOES NOT AFFECT THE RIGHTS YOU MAY HAVE UNDER LAWS IN OTHER COUNTRIES.



LIMITED WARRANTY.

Skier's Choice warrants to the original retail purchaser (the "First Owner") that the components and parts manufactured by Skier's Choice described below (the "Covered Components") of each Covered Boat are free from any defects in material and workmanship, under normal use and when operated and maintained according to Skier's Choice's instructions for the applicable Warranty Periods (defined below). The Skier's Choice warranty does not cover the engine and trailer sold with a Covered Boat, which are separately warranted under the Engine Warranty and the Trailer Warranty, respectively.

LIMITED FIVE-YEAR WARRANTY PERIOD ON COVERED COMPONENTS

This Limited Warranty applies to Covered Components other than the deck, hull, floor, and stringers for a period of five years (the "Five-Year Warranty Period") from the original delivery date by the First Owner (the "Original Delivery Date"), except as outlined herein. During the first two years of ownership Skier's Choice will provide both parts and labor for Covered Components; during years three (3) through five (5) of ownership Skier's Choice will provide replacement parts only for Covered Components and labor will be the responsibility of the Owner. This Five-Year Warranty Period does not apply to the audio, instrumentation, and electronic systems; Skier's Choice will provide both parts and labor for these systems for the first two years of ownership. Exclusions apply.

LIMITED LIFETIME PERIOD STRUCTURAL WARRANTY

This Limited Warranty applies to the deck, hull, floor (excluding carpet), and stringers for as long as the First Owner owns the Covered Boat (the "Lifetime Warranty Period"). Exclusions apply.

LIMITED ONE-YEAR WARRANTY PERIOD ON GEL COAT

This Limited Warranty applies to the gel coat for a period of one year (the "One-Year Warranty Period") from the original delivery date by the First Owner (the "Original Delivery Date"). The gel coat warranty is not transferable. Exclusions apply.

WARRANTY TRANSFER

The First Owner of a Covered Boat may assign and transfer (“Warranty Transfer”) the Covered Components Warranty and the Structural Warranty to the second owner (the “Second Owner”) subject to the following conditions:

- 1) The sale or conveyance by the First Owner occurs within five years after the Original Delivery Date;
- 2) An Authorized Moomba® Dealer inspects the Covered Boat within 14 days after the sale or conveyance by the First Owner to the Second Owner; and
- 3) the Warranty Transfer fee in effect at the time of the sale or conveyance from the First Owner to the Second Owner is paid to the inspecting Authorized Moomba® Dealer. Skier’s Choice may refuse to accept the Warranty Transfer if the dealer inspection reveals that the Covered Boat has been damaged or abused. If the sale or conveyance by the First Owner occurs more than five years after the Original Delivery Date, then this Limited Warranty (the Structural Warranty) shall be void as of the date of transfer and shall not be transferable to the Second Owner. Only one Warranty Transfer within the applicable five year time period will be accepted by Skier’s Choice, and any Structural Warranty transferred to a Second Owner will terminate ten years from the Original Delivery Date. This Limited Warranty immediately terminates without notice if and when the Second Owner sells or transfers the Covered Boat to a subsequent owner, and this Limited Warranty shall then be null and void. Warranty transfer for engine must be completed through Indmar. Warranty transfer of the trailer must be completed through Boatmate Trailer. If the Covered Boat is: 1) repossessed from the First Owner or the Second Owner; 2) purchased at auction (bank auction, online auction, auction house, etc.); 3) sold to or purchased from a salvage yard; or 4) sold to or purchased from an insurance company that obtained the Covered Boat as a result of an insurance claim then the Limited Warranty terminates and is null and void.

EXCLUSIONS

Skier’s Choice boats are manufactured from high-quality materials and components by skilled team members. Conditions outside of Skier’s Choice control, however, require limitations and exclusions from coverage under this Limited Warranty. Therefore, claims arising from or relating to the following are NOT covered by this Limited Warranty and Skier’s Choice disclaims any liability or obligation to the First Owner or the Second Owner, and any other person or party, with respect to the following:

1. Defects in or damage to a Covered Boat caused by the engine, trailer, or any components or parts (including, but not limited to, the bilge pump) not manufactured by Skier’s Choice. (Note: These excluded items may be covered by the Engine Warranty, the Trailer Warranty, or separate warranty from the part or component manufacturer);
2. Defects in a Covered Boat that has been sold or transferred by the First Owner and the Warranty Transfer conditions have not been timely satisfied;
3. Hardware or other components fastened or adhered to the hull, deck, floor, or stringers of the Covered Boat;
4. Normal maintenance and upkeep relating to the Covered Boat or any part thereof, including, but not limited to, alignment, adjustments, connectors, tune-ups and wear items, such as, shaft packing, belts, hoses, filters, seals, gaskets, and strut bushing;
5. Damage to or malfunction of a Covered Boat, or any component thereof, resulting from lack of maintenance, improper maintenance, impact, misuse, negligence, collision, allision, accident, or delay in repair;
6. Damage caused by fire, theft, freezing, vandalism, explosion, lightning, wind, hail storms, flooding, natural disasters, or Acts of God;
7. Equipment installed, repaired or replaced by anyone other than an Authorized Moomba® Dealer or the Skier’s Choice factory or factory representative;
8. Damage caused by any dealer-installed or Owner-installed options or accessories;

EXCLUSIONS CONTINUED:

9. Damage caused by use of the Covered Boat from: racing, speed or commercial competitions; performance demonstrations; ski schools; rental, charter, or other commercial uses; or military or industrial purposes;
10. Damage caused by improper alteration or modification to the Covered Boat or any of its component parts or accessories, including any damage caused by alteration, modification, repair, or replacement so as to increase the cubic inch capacity or horsepower output of the engine and Covered Boat from what was originally manufactured;
11. Damage caused by use of improper or contaminated materials or substances, including, but not limited to fuel, lubricants, or coolants;
12. Damage caused by failure to timely comply with any recall or request for repair, including the failure to observe any instructions regarding use or maintenance pending completion of recall repairs;
13. Damage caused by improper storage or support of the Covered Boat on davits, a hoist or cradling system, or boat lift of any kind;
14. Damage caused by failure to maintain the Covered Boat in accordance with the maintenance provisions in the Owner's Manual;
15. Speed, range, fuel consumption and other performance characteristics of the Covered Boat because they are estimated and may vary;
16. Damage to or defects in paints, varnishes, gel coat surfaces and colors, finish distortions, chrome plated or anodized finishes, floor covers, and any other surface coatings;
17. Gel coat discoloration, blisters, bubbles, or fading, including, but not limited to, those which may result from the Covered Boat being left in the water for long periods of time, or the failure to perform maintenance on the gel coat in a timely and proper manner in accordance with the Owner's Manual;

EXCLUSIONS CONTINUED:

18. Upholstery cracks, mold or mildew, stains, fading, or tears resulting from use, the failure to perform maintenance on the upholstery in a timely and proper manner in accordance with the Owner's Manual, impact, misuse, negligence, delay in repair, use of improper cleaners or conditioners;
19. Changes, revisions, or improvements made to the design, manufacture, options, accessories, or warranties of Skier's Choice
20. boats from previous boats, including the Covered Boat;
21. Any Covered Boat purchased from a dealer in another country, where the primary use of the boat will require the boat to cross an international border, except to the extent otherwise expressly provided in a separate written agreement between the First Owner and Skier's Choice.
22. Corrosion due to contaminants, environmental, or otherwise.

SOLE REMEDY

THE SOLE AND EXCLUSIVE REMEDY OF THE FIRST OWNER AND, IF APPLICABLE, THE SECOND OWNER, IS THE REPAIR OR REPLACEMENT, AT THE OPTION OF SKIER'S CHOICE, OF THE DEFECTIVE COVERED COMPONENT PARTS OF A COVERED BOAT AS PROVIDED HEREIN. IN NO EVENT, TO THE MAXIMUM EXTENT ALLOWED BY APPLICABLE LAW, SHALL SKIER'S CHOICE BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS ARISING OUT OF THE USE OR INABILITY TO USE THE COVERED BOAT OR ANY COVERED COMPONENT PART THEREOF, OR FOR ANY BREACH OF THIS LIMITED WARRANTY OR OTHERWISE. SOME STATES AND COUNTRIES, HOWEVER, DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Any Covered Component returned during the applicable Warranty Period to any Authorized Moomba® Dealer will be repaired or replaced at the sole option of Skier's Choice's provided that the following conditions apply:

1. Only the Covered Components that are declared defective upon examination by or for Skier's Choice will be repaired or replaced under this Limited Warranty;
2. Transportation of the Covered Boat or Covered Components to the Authorized Moomba® Dealer, or, if necessary, the Skier's Choice factory, must be pre-paid by the Covered Boat Owner;
3. Notice of any claim or defect under this Limited Warranty must be provided to an Authorized Moomba® Dealer no later than sixty (60) days after the Owner becomes aware of the defect;
4. The Covered Boat was purchased at a dealership authorized by Skier's Choice to distribute the boat model in the country in which the sale to the First Owner occurred.

NOTIFICATION OF CLAIM

Notification of a claim or defect in a Covered Boat must be made during the applicable Warranty Period directly to an Authorized Moomba® Dealer within 60 days after the Owner becomes aware of the defect. Information needed for processing a claim includes 1) name and address of the Owner; 2) serial number of the boat; 3) Original Delivery Date; 4) detailed explanation of the defect; and 5) estimated repair cost. Repair or replacement cannot be made until all of this information is received by an Authorized Moomba® Dealer. If a Covered Boat has been at an Authorized Moomba® Dealer for 15 days, or any warranty claim was not remedied in one repair attempt, an Owner must notify Skier's Choice directly. An Owner is responsible for providing Skier's Choice written notice of any warranty claims pending or discovered prior to the expiration of the Warranty Period.

REPAIR AND REPLACEMENT. In case of a defective Covered Component for which a claim has been properly made during the applicable Warranty Period, Skier's Choice will repair or replace, at its sole discretion, the Covered Component within a reasonable time period of receipt, unless otherwise required by law, by an Authorized Moomba® Dealer, or, if necessary, the Skier's Choice factory. Covered Components replaced or repaired pursuant to this Limited Warranty shall not extend the original Warranty Period, unless otherwise required by law. The repair or replacement of Covered Components will be made by Skier's Choice without charge to the Owner for parts or labor except as provided herein. The replacement or repair of the defective part or component as stated in this Limited Warranty shall be the sole and exclusive remedy of the Owner and the sole liability of Skier's Choice under this Limited Warranty and any implied warranties. Acceptance of any returned component by an Authorized Moomba® Dealer or Skier's Choice shall not be deemed an admission that the component is defective.

REPAIR AND REPLACEMENT CONTINUED:

SKIER'S CHOICE'S LIABILITY SHALL BE LIMITED SOLELY AND EXCLUSIVELY TO THE REPAIR OR REPLACEMENT OF THE COVERED BOAT OR COVERED COMPONENT FOUND TO BE DEFECTIVE AND REPORTED DURING THE APPLICABLE WARRANTY PERIOD. IN NO EVENT, SHALL SKIER'S CHOICE'S ULTIMATE LIABILITY EXCEED THE FAIR MARKET PRICE VALUE OF THE COVERED COMPONENT OR THE COVERED BOAT FOUND TO BE DEFECTIVE AND REPORTED DURING THE APPLICABLE WARRANTY PERIOD. SOME STATES AND COUNTRIES, HOWEVER, DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

No third party beneficiaries. This Limited Warranty does not create any right or benefit for any third party and is for the sole benefit of the First Owner and, if applicable after a valid Warranty Transfer, the Second Owner.

OTHER LIMITATIONS

THE DEALER IS NOT THE AGENT OF SKIER'S CHOICE AND SKIER'S CHOICE DOES NOT AUTHORIZE THE DEALER, OR ANY OTHER PERSON, TO ASSUME ON BEHALF OF SKIER'S CHOICE ANY LIABILITY, OBLIGATION OR EXPENSE INCURRED IN THE COURSE OF REPAIRING ITS PRODUCTS OTHER THAN THOSE EXPRESSLY AUTHORIZED IN THIS LIMITED WARRANTY. THE DEALER MAY NOT EXTEND OR IN ANY WAY CHANGE OR AMEND THIS LIMITED WARRANTY, NOR CAN THE DEALER MAKE OR ALTER THIS LIMITED WARRANTY OR MAKE ANY REPRESENTATIONS ON BEHALF OF SKIER'S CHOICE.

No advice or communication of any nature by Skier's Choice or its representatives shall modify or extend the terms or scope of this Limited Warranty, nor can a Skier's Choice representative make any representation on behalf of Skier's Choice that in any way modifies the terms or scope of this warranty, except as authorized in writing by the Chief Executive Officer ("CEO") or President of Skier's Choice. ANY ACTION FOR BREACH OF WARRANTY AGAINST SKIER'S CHOICE SHALL BE BARRED UNLESS IT IS COMMENCED WITHIN ONE YEAR FROM THE DATE OF ACCRUAL OF SUCH CAUSE OF ACTION. SOME STATES OR COUNTRIES MAY NOT ALLOW THE APPLICABLE STATUTE OF LIMITATIONS FOR BREACH OF WARRANTY TO BE REDUCED, SO THIS PROVISION MAY NOT APPLY TO YOU.

This Limited Warranty shall be modified in its application and enforcement to the extent restricted, prohibited, or modified by local law to conform to applicable law. The invalidity or unenforceability of any one or more of the provisions of this Limited Warranty herein shall not affect the validity and enforceability of other provisions.

AUSTRALIAN CONSUMERS ONLY

Warranty claims under this Limited Warranty may be sent to Ride Australia Pty Ltd., 245 Princes Highway PO Box 1454 Nowra, NSW, Australia 2541 (Tel: +61 2 4422 4477) service@rideaustralia.com.au.

The benefits to the consumer given by this Limited Warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods to which the warranty relates. This Limited Warranty does not cover any expenses that you may incur claiming the warranty. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

CALIFORNIA EVAPORATIVE EMISSIONS CONTROL SYSTEM WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board and Skier's Choice, Inc., is pleased to explain the evaporative emissions control system's warranty on your 2024 Moomba. In California, new SIMW must be designed, built, and equipped to meet the State's stringent anti-smog standards. Skier's Choice, Inc. must warrant the evaporative emissions control system on your Moomba for the period listed below, provided there has been no abuse, neglect or improper maintenance of your SIMW.

Your evaporative emissions control system may include parts such as: canisters, carburetors, clamps, connectors, filters, fuel caps, fuel lines, fuel tanks, valves, vapor hoses, and other associated evaporative emissions control system components.

MANUFACTURER'S WARRANTY COVERAGE:

This evaporative emissions control system is warranted for two years. If any evaporative emission-related part on your SIMW is defective, the part will be repaired or replaced by Skier's Choice, Inc..

OWNER'S WARRANTY RESPONSIBILITIES:

As the Moomba owner, you are responsible for performance of the required maintenance listed in your owner's manual. Skier's Choice, Inc. recommends that you retain all receipts covering maintenance on your Moomba, but Skier's Choice, Inc. cannot deny warranty solely for the lack of receipts.

As the Moomba owner, you should however be aware that the Skier's Choice, Inc. may deny you warranty coverage if your Moomba or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your Moomba to a Skier's Choice, Inc. distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 calendar days. If you have a question regarding your warranty coverage, you should contact Skier's Choice, Inc. Customer Service Department at 1-800-320-2779

NOTE: Authority cited: Sections 39600, 39601, 43212 and 43013 Health and Safety Code. Reference: Section 43013 Health and Safety Code. Skier's Choice may be contacted at:

SKIER'S CHOICE, INC.

1717 HENRY G. LANE STREET MARYVILLE, TN 37801 TOLL FREE: (800) 320-2779

TEL: (865) 983-9924

FAX: (865) 983-9950

EMAIL: MOOMBAINFO@SKIERSCHOICE.COM

Your evaporative emissions control system includes: fuel cap, fuel lid, fuel vent, carbon canister, inlet control valve, fuel vent hose, fuel fill hose, high pressure fuel line, fuel tank, fuel tank bracket, fuel hose lock clip, fuel fill "T" fitting, inlet control valve shield, fuel hose clamps, and other associated evaporative emissions control system components.



WATER SPORTS INDUSTRY ASSOCIATION (WSIA)

The WSIA is the towed water sports industry's leading advocate, known for preserving the vitality of our activities long into the future. As a group, we develop best practices, maintain waterway access rights, educate participants, promote safety and facilitate sustainable industry growth. For more information visit: <https://www.wsia.net>

WAKE RESPONSIBLY

- 1 Always operate 200+ feet away**
from shorelines and docks, and steer clear of parked boats and smaller watercraft.
- 2 Play music at reasonable levels**
and have respect for your surroundings. Consider time of day and be mindful that explicit lyrics may offend others.
- 3 Minimize repetitive passes**
along residential shorelines.

wsia
www.wsia.net

WATERSPORTS RESPONSIBILITY CODE

Be aware that there are elements of risk in boating, skiing, and riding that common sense and personal awareness can help reduce. Know your ability level and stay within it. To increase your enjoyment of the sport follow the “Watersports Responsibility Code”.

It is your responsibility to:

- Familiarize yourself with all applicable laws, the risks inherent in the sport, and the proper use of equipment.
- Know the waterways where you will be skiing or riding. Do not ski or ride in shallow water, near shore, docks, pilings, swimmers, or other watercraft.
- Always have a person other than the boat driver as an observer and agree on hand signals before starting.
- Always wear a U.S. Coast Guard type III (PFD) vest.
- Read your owner’s manual and inspect your equipment prior to use.
- Ski or ride within your limits. Always ski or ride in control and at speeds appropriate for you ability.
- Always turn ignition off when anyone is near watercraft power drive unit.
- Carbon Monoxide (CO) poisoning from engine exhaust may cause injury or death. Never “Platform Drag” or touch a swim platform while the engine is running.
- Do not operate watercraft, ski or ride under the influence of alcohol or drugs.
- Water Sports Industry Association (WSIA)

WATERSPORTS SAFETY CODE

Before you get in the water: Skiing or riding instruction is recommended before use. Instruction will teach general safety guidelines and proper skiing or riding techniques, which may reduce your risk of injury. For more information on skiing or riding schools, contact your dealer, Association, or local ski club.

It is your responsibility to:

- Know the federal, state and local laws that apply to your area.
- If you are not familiar with a waterway, ask someone who is, to tell you about any hidden dangers or things to avoid
- Whether you plan to be in a watercraft, or skiing/riding behind one it is important you are wearing a properly fitted life jacket (PFD) approved by your country’s agency, USCG Type III, ISO, etc.
- Inspect all equipment prior to each use, check bindings, fins, tube, attachment, tow rope and flotation device. Do not use if damaged.

WATERCRAFT SAFETY: A knowledgeable and responsible driver is the most important safety device on any watercraft.

- Never operate a watercraft, ski or ride under the influence of alcohol or drugs.
- Only use water ballast and people for additional weight.
- Never exceed the passenger or weight limitations of the watercraft.
- Never allow passengers to hang outside the watercraft or towed device or sit on the gunwales or anywhere outside of the normal seating area.
- Never allow water to overflow the bow or gunwales of the watercraft.
- Uneven weight distribution or additional weight may; affect the handling of the watercraft.

CARBON MONOXIDE: The exhaust from the engine on a watercraft contains Carbon Monoxide (CO) which is a colorless, odorless and poisonous gas. Excessive exposure to CO can cause severe injury or death. Follow this advice to avoid injury:

- Never “Platform Drag” by holding onto the boarding platform or be dragged directly behind the watercraft. This is where CO will be.
- Do not sit on the watercraft transom or boarding platform while the engine is running.
- Make sure the engine is properly tuned and running well. An improperly tuned engine produces excessive exhaust and CO.
- If you smell engine exhaust, do not stay in that position.
- Go to the United States Coast Guard’s website: www.uscgboating.org for more information on how to help protect yourself and others from the dangers of CO.

TOW ROPES: Tow ropes come in different lengths and strengths for different activities. Make sure any rope you are using is suited for wakesurfing, wakeboarding, or riding and that it is in good condition.

- Never use a rope that is frayed, knotted, unraveling or discolored from use or being left in the sun. If a rope breaks while in use, it can recoil at the rider being towed or into the watercraft where it might strike passengers. Replace tow ropes with any sign of damage.
- Never use a tow rope with elastic or bungee material to pull skiers or riders.
- Rope should be attached to the watercraft in an approved fashion with hardware designed for towing. Refer to your watercraft manual for instructions on proper tow rope attachment.
- Always keep people and tow ropes away from the propeller, even when idling.
- If a tow rope should become entangled in a propeller, shut off the engine, remove the key and put it in your pocket before retrieving the rope.

PREPARING TO WAKEBOARD, WAKESURF OR RIDE: Always have a person other than the driver as an observer to look out for the rider.

- BE sure the driver is aware of the experience and ability level of the boarder/rider.
- The driver, observer and rider need to agree on hand signals before riding. Signals should include READY, STOP, SPEED UP, and SLOW DOWN.
- Start the engine only after making sure that no one in the water is near the propeller.
- **Turn the engine off when people are getting into or out of the watercraft, or in the water near the watercraft.**
- Always make sure the tow rope is not wrapped around anyone’s hands, arms, legs, or other parts of the body.
- Start the watercraft and move slowly to remove slack until the tow rope is tight.
- When the skier/rider signals READY and there is no traffic ahead, take off in a straight line. Adjust the speed according to the signals given by the rider.

WAKESPORTS OR RIDING: The watercraft and rider should always maintain a sufficient distance from obstacles so a rider falling or coasting and/or watercraft will not encounter any obstacle.

- Do **NOT** use in shallow water or near shore, docks, pilings, swimmers, other watercraft, or any other obstacles.
- Use only on the water.
- Never attempt land or dock starts. This will increase your risk of injury or death.
- Always wear a properly fitted U.S. Coast Guard Type III (PFD) or ISO approved Life Jacket.
- The faster you ride, the greater your risk of injury.
- Never make sharp turns that may cause a slingshot effect on the rider’s speed.
- Rider should be towed at an appropriate speed for their ability level.

FALLEN SKIER OR RIDER: Falling and injuries are common in Wakeboarding, Wakesurfing, or riding.

- Circle a fallen rider slowly to return the tow rope handle or pick up the fallen rider.
- Put the watercraft in neutral when near a fallen rider.
- Always keep the fallen rider in view and on the driver's side of the watercraft.
- Display a red or orange skier-down flag to alert other vessels that a rider is down.

NOTE: The Warnings and practices in the Watersports Safety Code represent common risks encountered by users. The code does not cover all instances of risk or danger. Please use common sense and good judgment.



OWNER'S RESPONSIBILITY/ ASSISTANCE

OWNER RESPONSIBILITY

1. Before operating your Moomba, it is necessary to read and fully understand this Owner's Manual and all other information delivered with the boat.
2. It is the owner's responsibility to take the boat to an authorized Moomba dealer to obtain warranty service.
3. It is the owner's responsibility to properly operate and maintain the boat in accordance with this manual and all other information delivered with the boat.
4. The owner should keep maintenance records, should it be necessary to show that required maintenance has been performed on the boat.

DEALER'S RESPONSIBILITY

1. The Dealer should provide the buyer with an adequate orientation in the general operation of the boat and review all systems and accessories included with the boat.
2. The Dealer should deliver a complete owner's manual packet with the boat consisting of Owner's Manual, Registration, Engine Manual, Stereo Manual, Moomba Warranty and all warranties for separately warranted items aboard the boat.
3. The Dealer should review all warranty information with the buyer and assist in filling out warranty cards if necessary.
4. The Dealer should ensure that any information or obligation from either Skier's Choice, Inc. or from the dealership is clearly understood by the buyer.
5. The Dealer should instruct the buyer in obtaining local service and out-of-area service for a Moomba boat.

CUSTOMER ASSISTANCE

The staff at Skier's Choice, Inc. is concerned with your complete satisfaction. This includes the prompt resolution of any problems that may arise during the warranty period. Normally, problems encountered may be efficiently and effectively resolved by your Moomba Dealer. However, if a problem cannot be handled by the Dealer or if a solution is not satisfactory to you as an Owner, please follow these steps to get the matter resolved:

STEP ONE

Discuss the problem with a member of your Moomba Dealer's management staff. It is most likely that the problem will be resolved at this level.

STEP TWO

If the Dealer management does not resolve the problem to your satisfaction, please have the problem and all action taken, documented by the Dealer, then contact the factory Customer Service Representative at Skier's Choice, Inc.:

Skier's Choice, Inc.

1717 Henry G. Lane Street

Maryville, TN 37801

Toll Free: (800) 320-2779

Tel: (865) 983-9924 Fax: (865) 983-9950

Describe the original problem in detail to the Customer Service Representative. Be prepared to furnish appropriate documentation and the reasons why service by the Dealer was unsatisfactory. If further action is required to resolve the problem, the Customer Service Representative will dictate the appropriate action.

CUSTOMER ASSISTANCE CONTINUED:

STEP THREE

Finally, if after following these steps and providing documentation and after obtaining necessary authorization from the Customer Service Representative to take additional action, the problem is still not resolved to your satisfaction, the President of Skier's Choice, Inc. will personally review the problem and make a determination concerning a resolution.

CLEAN BOATS, CLEAN WATER: WHAT YOU NEED TO KNOW BEFORE YOU LAUNCH

Boats can transfer plants and animals from one waterway to another. The transferred organisms are aquatic invasive species (AIS).



- AIS, specifically mussels, can clog drains, causing extensive damage to water supplies. The mussels often cannot be seen with the naked eye because they are microscopic. Trailers can transport non-native plants, affecting water quality and navigation.
- Before you launch your boat, know the area's laws. Some localities require boat inspections or decontamination to prevent the spread of AIS. If a stop at a decontamination station is required, draining and flushing ballast tanks is part of the process.
- Even when you are not legally required to clean your boat, take a few minutes to protect your boat and the environment. CLEAN, DRAIN, and DRY after each use. Remove visible plants, then rinse the hull and trailer with hot water. Next, drain the bilge, ballasts, and live wells.

Remove all drain plugs while transporting your boat. Always allow your boat to dry completely before launching at a new waterbody. Each of the ballast reservoirs can be flushed by connecting the AIS flush hose to each of the AIS style vent outlets and switching the ballast pumps to drain thus flushing the system.

Working together, we can keep our waterways clean and open!



MAINTENANCE LOG

DATE	HOURS	WORK COMPLETED

DATE	HOURS	WORK COMPLETED

DATE	HOURS	WORK COMPLETED

DATE	HOURS	WORK COMPLETED

DATE	HOURS	WORK COMPLETED



Explore our full line and features:

Moomba.com